

winjet[®] ML2000N

Parts Manual

VER. 1.1 Apr. 2015

 KPOWERSCIENCE CO., LTD.

ISO 9001 CERTIFIED

TAIWAN/CHINA BUSINESS DEPARTMENT:

8FL., No. 276, Sec.1, Ta-Tung Rd., Hsi-Chih Dist, New Taipei City 221, Taiwan
TEL: 886-2-2647-5855 FAX: 886-2-2643-1151

INTERNATIONAL BUSINESS DEPARTMENT:

No.34, Sec. 2, Ligong 1st Rd., Wujie Township, Yilan County 268, Taiwan
TEL: 886-3-990-8885 FAX: 886-3-990-8868

1. CONSUMABLES

Item No.	Part Number	Part Name	Note
1	WJ03-0496-011-01	TONER CARTRIDGE (700G)	Shown in Fig. 1-1
2	WJ03-0323-000-01	WASTE TONER BOX	Shown in Fig. 1-2
3	WJ03-0427-011-01	DEVELOPER (750G)	Shown in Fig. 1-3
4	WJ03-0765-001-02	DEVELOPING UNIT(W/DEVELOPER)	Shown in Fig. 1-4
5	WJ03-0385-000-01	OPC DRUM	Shown in Fig. 1-5
6	WJ03-0517-000-01	CLEANING UNIT	Shown in Fig. 1-6
7	WJ03-0424-003-01	MAIN CHARGER	Shown in Fig. 1-7
8	WJ03-0425-001-01	TRANSFER CHARGER	Shown in Fig. 1-8
9	WJ03-0516-000-01	PRE-CHARGER	Shown in Fig. 1-9
10	WJ01-0146-010-01	XENON LAMP	Shown in Fig. 1-10
11	WJ03-0396-000-01	AIR FILTER	Shown in Fig. 1-11

2. SPARE PARTS

Item No.	Part Number	Part Name	Note
1	WJ01-0428-001-01	TRANSPORT BELT (3EA/SET)	Shown in Fig. 2-1
2	WJ03-0457-006-01	TRACTOR BELT UNIT (LEFT)	Shown in Fig. 2-2
3	WJ03-0457-007-01	TRACTOR BELT UNIT (RIGHT)	Shown in Fig. 2-3
4	WJ02-2807-011-01	PRE-CHARGER SPRING PLATE	Shown in Fig. 2-4 For main charger & pre-charger
5	WJ02-2806-001-01	DRIVING SHAFT CONTACT	Shown in Fig. 2-5
6	WJ02-2806-002-01	SLAVE SHAFT CONTACT	Shown in Fig. 2-6
7	WJ02-2807-065-01	DRUM FIXED PLATE CONTACT	Shown in Fig. 2-7
8	WJ02-3553-000-01	O-RING (19x2 mm)	Shown in Fig. 2-8 For PMS Sensor
9	WJ01-2530-000-01	LED PRINT HEAD	Shown in Fig. 2-9
10	WJ02-2717-001-01	HIGH VOLTAGE POWER SUPPLY	Shown in Fig. 2-10
11	WJ03-0407-002-01	DC POWER SUPPLY (DPS02B)	Shown in Fig. 2-11
12	WJ03-0537-008-01	FLASH POWER SUPPLY (FP07A2-S)	Shown in Fig. 2-12

2. SPARE PARTS

Item No.	Part Number	Part Name	Note
13	WJ03-0409-003-01	AC POWER TERMINAL BOX	Shown in Fig. 2-13
14	WJ03-0410-001-01	FUSE SET	Shown in Fig. 2-14
15	WJ03-0411-002-01	HV CONNECTOR FOR FUSER UNIT	Shown in Fig. 2-15
16	WJ03-0459-097-01	MAIN CHARGER CONNECTOR SET (+HV1)	Shown in Fig. 2-16
17	WJ03-0459-094-01	SEPARATOR CONNECTOR SET (+HV3)	
18	WJ03-0459-098-01	PRE-CHARGER CONNECTOR SET (+HV2)	
19	WJ03-0555-024-01	TRANSFER CHARGER CONNECTOR SET (-HV)	
20	WJ03-0459-116-01	VARISTOR CONNECTOR SET	Shown in Fig. 2-17
21	WJ03-0413-000-01	FUSER UNIT	Shown in Fig. 2-18
22	WJ03-0414-000-01	XENON LAMP TRIGGER COIL UNIT	Shown in Fig. 2-19
23	WJ03-0459-072-01	SIGNAL CONNECTOR FOR FUSER UNIT	Shown in Fig. 2-20

2. SPARE PARTS

Item No.	Part Number	Part Name	Note
24	WJ03-0555-044-01	CONNECTOR FOR TRANSPORT UNIT	Shown in Fig. 2-21
25	WJ03-0459-083-01	CONNECTOR FOR DEVELOPING UNIT	Shown in Fig. 2-22
26	WJ03-0594-324-01	KMPU BOARD REV3.1	Shown in Fig. 2-23
27	WJ02-3555-005-01	DCMTR DRV BOARD (NU-FZ5037)	Shown in Fig. 2-24
28	WJ03-0553-001-01	ELEVATOR MOTOR UNIT	Shown in Fig. 2-25
29	WJ03-0399-005-01	DEVELOPING MOTOR UNIT	Shown in Fig. 2-26
30	WJ03-0430-005-01	DRUM MOTOR UNIT	Shown in Fig. 2-27
31	WJ03-0571-000-01	PAPER OUT MOTOR UNIT	Shown in Fig. 2-28
32	WJ03-0419-000-01	WASTE TONER FULL SENSOR	Shown in Fig. 2-29
33	WJ03-0420-000-01	CROSS SENSOR	Shown in Fig. 2-30 For Paper Empty Sensor
34	WJ02-2718-000-01	SENSOR PS-R50D	Shown in Fig. 2-31 For PTS, POPS, PTPS

2. SPARE PARTS

Item No.	Part Number	Part Name	Note
35	WJ02-3614-000-01	MICRO SWITCH	Shown in Fig. 2-32
36	WJ03-0421-000-01	INTERRUPT SENSOR	Shown in Fig. 2-33 For PMS
37	WJ03-0421-001-01	INTERRUPT SENSOR	Shown in Fig. 2-34 For Elevator Motor Unit
38	WJ03-0467-000-01	FRONT COVER SENSOR	Shown in Fig. 2-35
39	WJ03-0404-013-01	PAPER OUT UNIT (INCLUDE SPLITTER)	Shown in Fig. 2-36
40	WJ03-0640-000-01	FUSER COVER GLASS	Shown in Fig. 2-37
41	WJ03-0547-001-01	ERASE LAMP UNIT	Shown in Fig. 2-38
42	WJ03-0416-000-01	BLOWER UNIT	Shown in Fig. 2-39 For Air Filter
43	WJ03-0417-000-01	FUSER EXIT BLOWER UNIT	Shown in Fig. 2-40
44	WJ03-0460-000-01	FAN (12 cm)	Shown in Fig. 2-41 For Rear Cover (Upper)
45	WJ02-3684-000-01	FAN (15 cm)	Shown in Fig. 2-42 For Rear Cover (Lower)

2. SPARE PARTS

Item No.	Part Number	Part Name	Note
46	WJ03-0433-000-01	SUCTION FAN	Shown in Fig. 2-43
47	WJ03-0461-002-01	MPU FAN (6 cm)	Shown in Fig. 2-44 For KMPU
48	WJ03-0461-004-01	PO FAN (6cm)	Shown in Fig. 2-44 For Paper Out
49	WJ03-0441-001-01	SPLITTER SOLENOID	Shown in Fig. 2-45
50	WJ03-0769-001-01	TRANSPORT UNIT	Shown in Fig. 2-46
51	WJ02-2614-012-01	REFLECTION PLATE	Shown in Fig. 2-47
52	WJ03-0769-003-01	TRACTOR UNIT	Shown in Fig. 2-48
53	WJ03-0471-000-01	HV CONNECTOR FOR TRANSPORT UNIT	Shown in Fig. 2-49
54	WJ03-0438-002-01	ENGLISH OPERATION PANEL	Shown in Fig. 2-50
55	WJ01-0791-000-01	DRUM SURFACE POTENTIAL SENSOR UNIT	Shown in Fig. 2-51
56	WJ03-0459-078-01	LED ARRAY THERMAL SENSOR	Shown in Fig. 2-52

2. SPARE PARTS

Item No.	Part Number	Part Name	Note
57	WJ03-0462-002-01	FAN (8 cm)	Shown in Fig. 2-53 For Fuser Unit Upper
58	WJ02-2740-001-01	COMPRESSION SPRING OF DEVELOPER MOTOR UNIT	Shown in Fig. 2-54
59	WJ02-2809-001-01	DEVELOPING MOTOR UNIT DRIVING CLAW	Shown in Fig. 2-55
60	WJ02-2850-001-01	BEARING (6900ZZNR)	Shown in Fig. 2-56 For Transport Roller (Rear)
61	WJ02-2852-001-01	BEARING (F688ZZ / LF-1680)	Shown in Fig. 2-57 For Transport Roller (Front)
62	WJ02-2868-001-01	BEARING (F63800ZZ)	Shown in Fig. 2-58 For Tractor shaft
63	WJ02-2892-000-01	BEARING (F63801ZZ)	Shown in Fig. 2-59
64	WJ02-2853-000-01	BEARING (6004ZZ)	Shown in Fig. 2-60 For Drum Shaft

3. STACKER SPARE PARTS

Item No.	Part Number	Part Name	Note
1	WJ02-2024-000-01	PULL-UP SPRING	Shown in Fig. 3-1
2	WJ03-0445-002-01	ROLLER MOTOR UNIT (W/GEAR)	Shown in Fig. 3-2
3	WJ03-0402-001-01	ROLLER UNIT	Shown in Fig. 3-3
4	WJ03-0332-000-01	PADDLE MOTOR UNIT	Shown in Fig. 3-4
5	WJ03-0447-001-01	DOWN MOTOR UNIT (W/GEAR)	Shown in Fig. 3-5
6	WJ02-1761-000-01	PADDLE RUBBER UNIT	Shown in Fig. 3-6
7	WJ02-2714-001-01	LEFT UPPER BRACKET	Shown in Fig. 3-7
8	WJ02-2714-002-01	RIGHT UPPER BRACKET	Shown in Fig. 3-8
9	WJ02-2714-003-01	BASE BRACKET	Shown in Fig. 3-9
10	WJ03-0435-000-01	FRONT PAPER GUIDE UNIT	Shown in Fig. 3-10
11	WJ02-2828-001-01	REAR PAPER GUIDE UNIT	Shown in Fig. 3-11
12	WJ03-0357-010-01	DC STACKER CONTROL BOARD V5.2	Shown in Fig. 3-12

3. STACKER SPARE PARTS

Item No.	Part Number	Part Name	Note
13	WJ02-2020-001-01	BEARING (MF 117ZZS)	Shown in Fig. 3-13 For Roller Unit

4. TOOLS

Item No.	Part Number	Part Name	Note
1	WJ02-3469-000-01	DRUM SETTING ROD	Shown in Fig. 4-1
2	WJ05-5200-001-01	DUMMY DRUM SET	Shown in Fig. 4-2 For DSPS Sensor Adjustment
3	WJ05-5200-002-01	TRANSFER GAP GAUGE	Shown in Fig. 4-3
4	WJ05-5204-001-01	SCRAPER	Shown in Fig. 4-4 For Fuser Cover Glass
5	WJ05-5204-002-01	PLASTIC SCRAPER	Shown in Fig. 4-5 For Transport Table Fused Toner
6	WJ05-5301-001-01	ADJUSTMENT TOOL (FOR PAPER EMPTY SENSOR)	Shown in Fig. 4-6
7	WJ05-5301-000-01	ADJUSTMENT TOOL (FOR 1/6" PAPER IN ENCODER)	Shown in Fig. 4-7
8	WJ03-0439-000-01	CLEAN TOOLS	Shown in Fig. 4-8

1. CONSUMABLES



TONER CARTRIDGE (700G) < WJ03-0496-011-01>

Fig. 1-1

1. CONSUMABLES



WASTE TONER BOX < WJ03-0323-000-01>

Fig. 1-2

1. CONSUMABLES



DEVELOPER (750G) < WJ03-0427-011-01>

Fig. 1-3

1. CONSUMABLES



DEVELOPING UNIT(W/DEVELOPER) < WJ03-0765-001-02>

Fig. 1-4

1. CONSUMABLES



OPC DRUM < WJ03-0385-000-01>

Fig. 1-5

1. CONSUMABLES



CLEANING UNIT < WJ03-0517-000-01>

Fig. 1-6

1. CONSUMABLES



MAIN CHARGER < WJ03-0424-003-01>

Fig. 1-7

1. CONSUMABLES



TRANSFER CHARGER < WJ03-0425-001-01>

Fig. 1-8


1. CONSUMABLES



PRE-CHARGER < WJ03-0516-000-01>

Fig. 1-9

 
1. CONSUMABLES

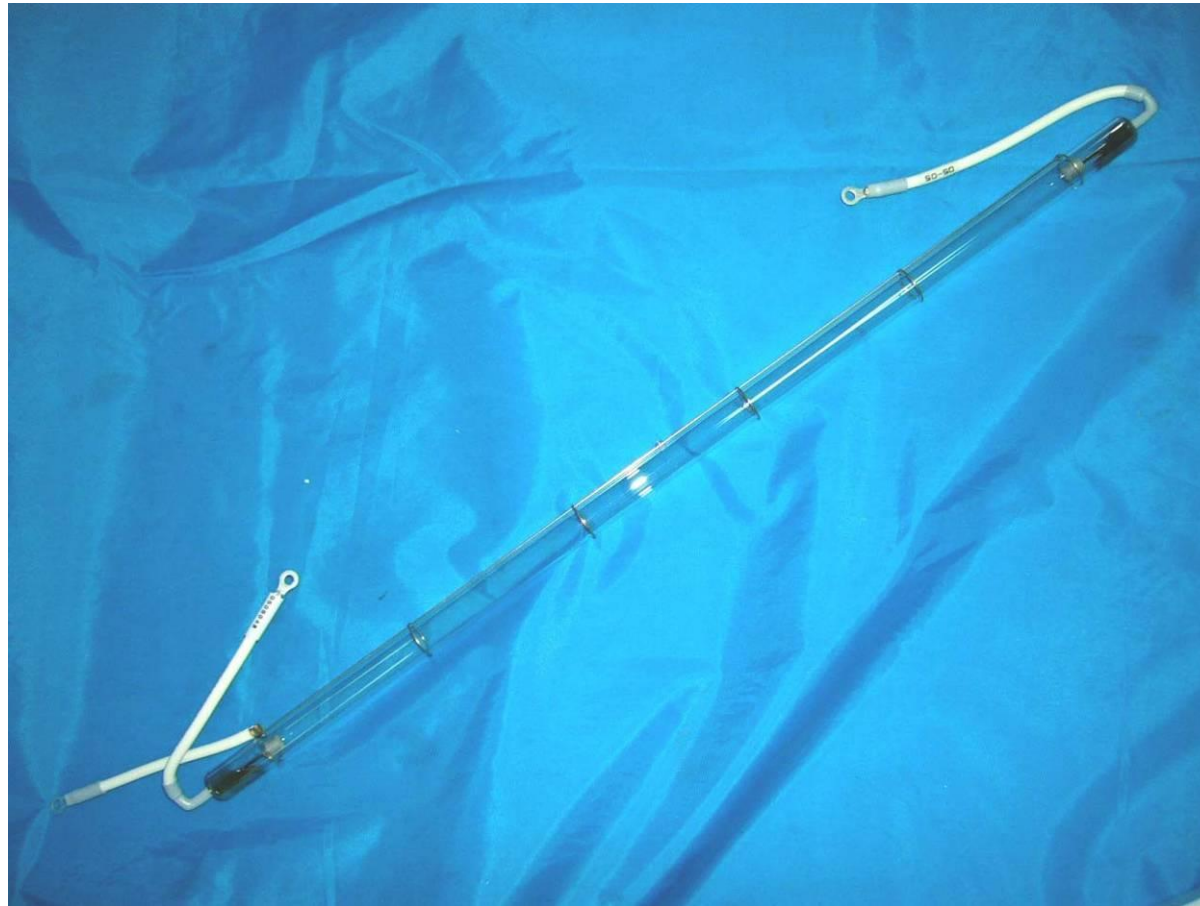

XENON LAMP < WJ01-0146-010-01>

Fig. 1-10

 
1. CONSUMABLES

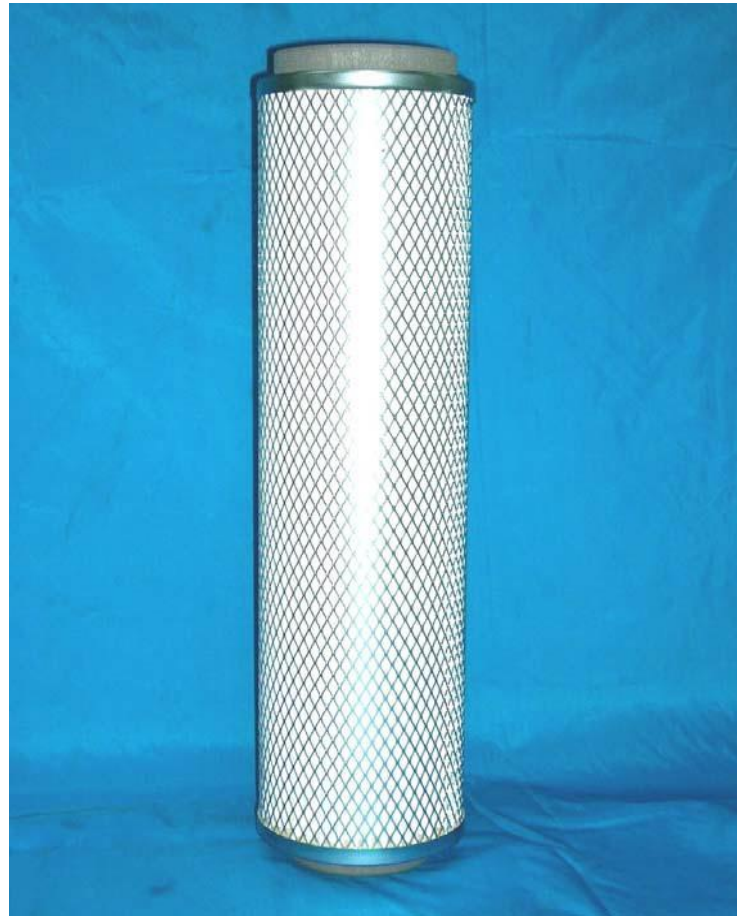

AIR FILTER < WJ03-0396-000-01>

Fig. 1-11

 
2. SPARE PARTS

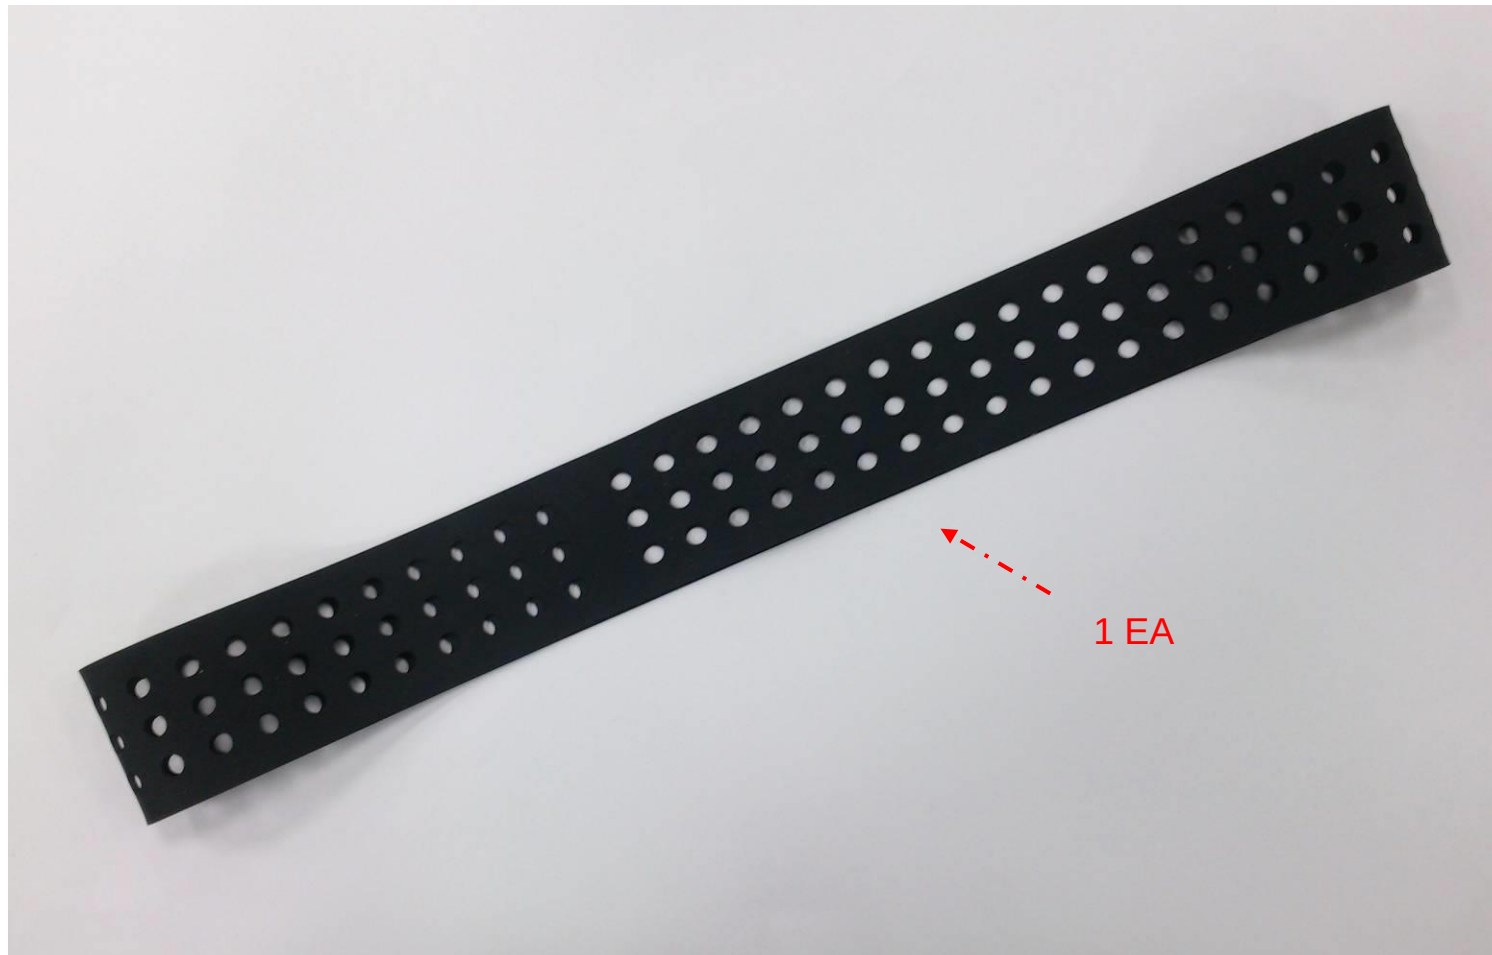

TRANSPORT BELT (3EA/SET) < WJ01-0428-001-01>

Fig. 2-1

 
2. SPARE PARTS

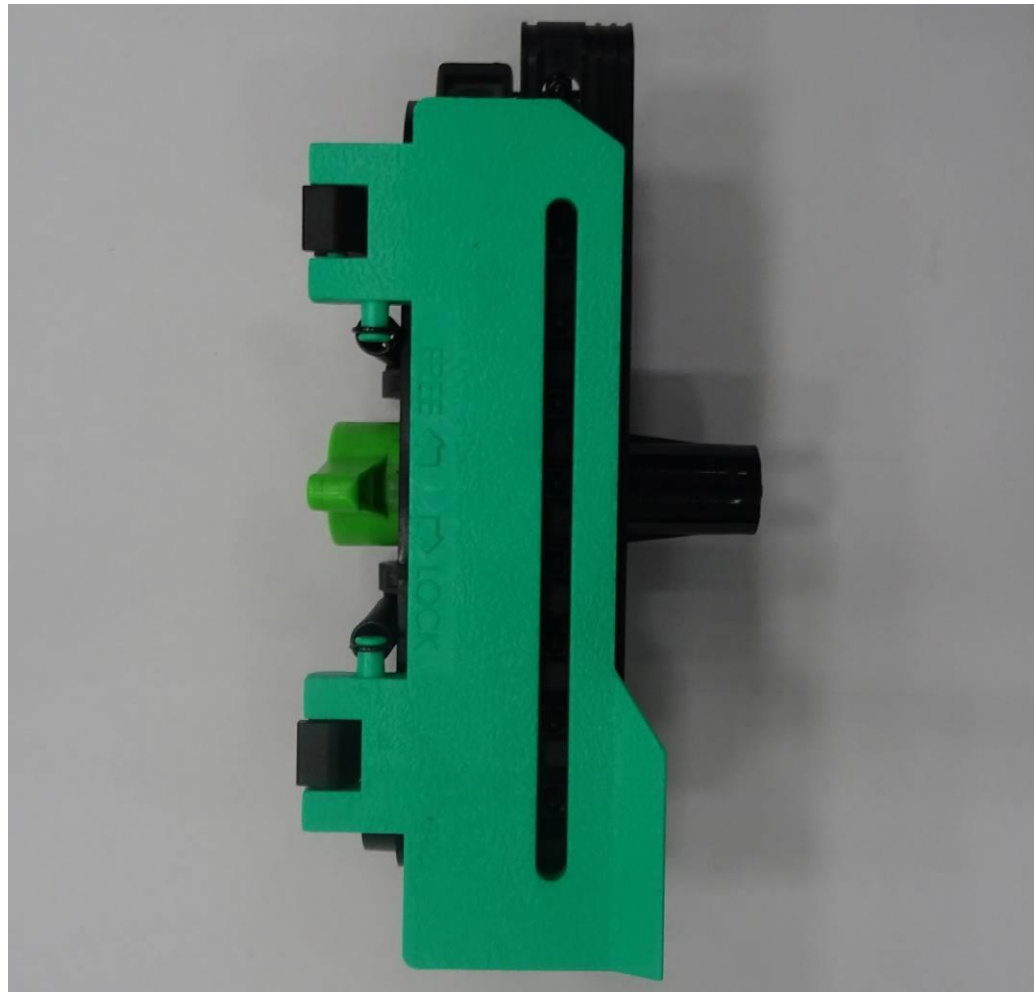

TRACTOR BELT UNIT (LEFT) < WJ03-0457-006-01>

Fig. 2-2

 
2. SPARE PARTS

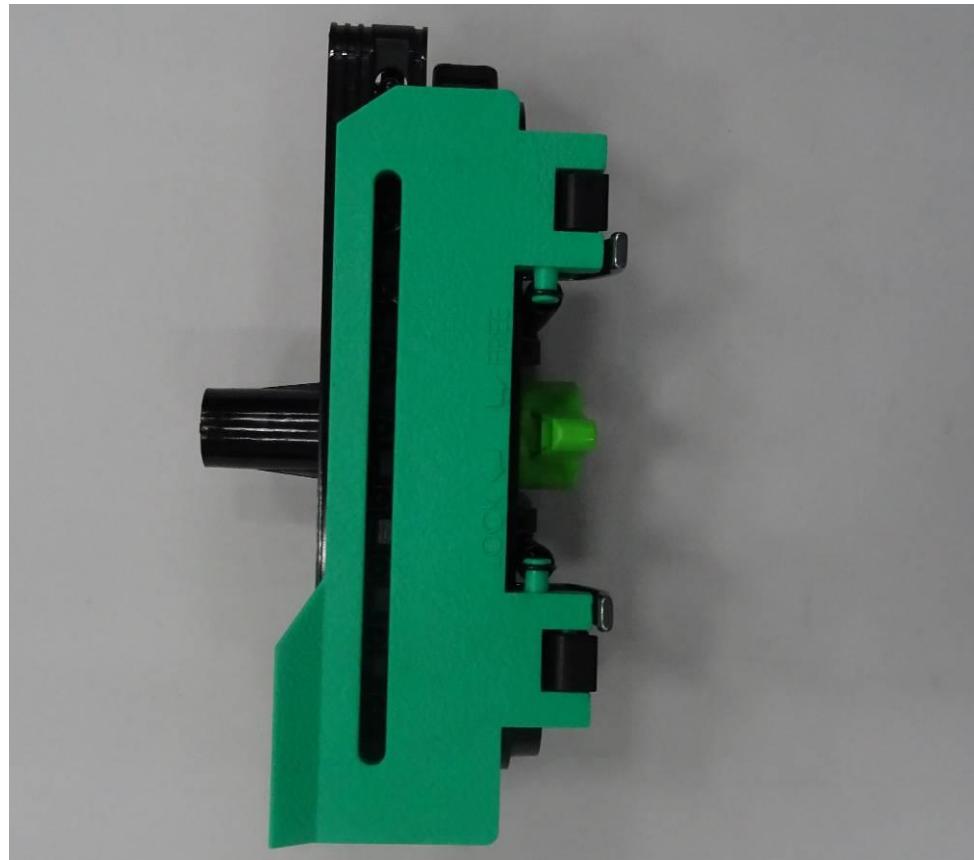

TRACTOR BELT UNIT (RIGHT) < WJ03-0457-007-01>

Fig. 2-3

 2. SPARE PARTS

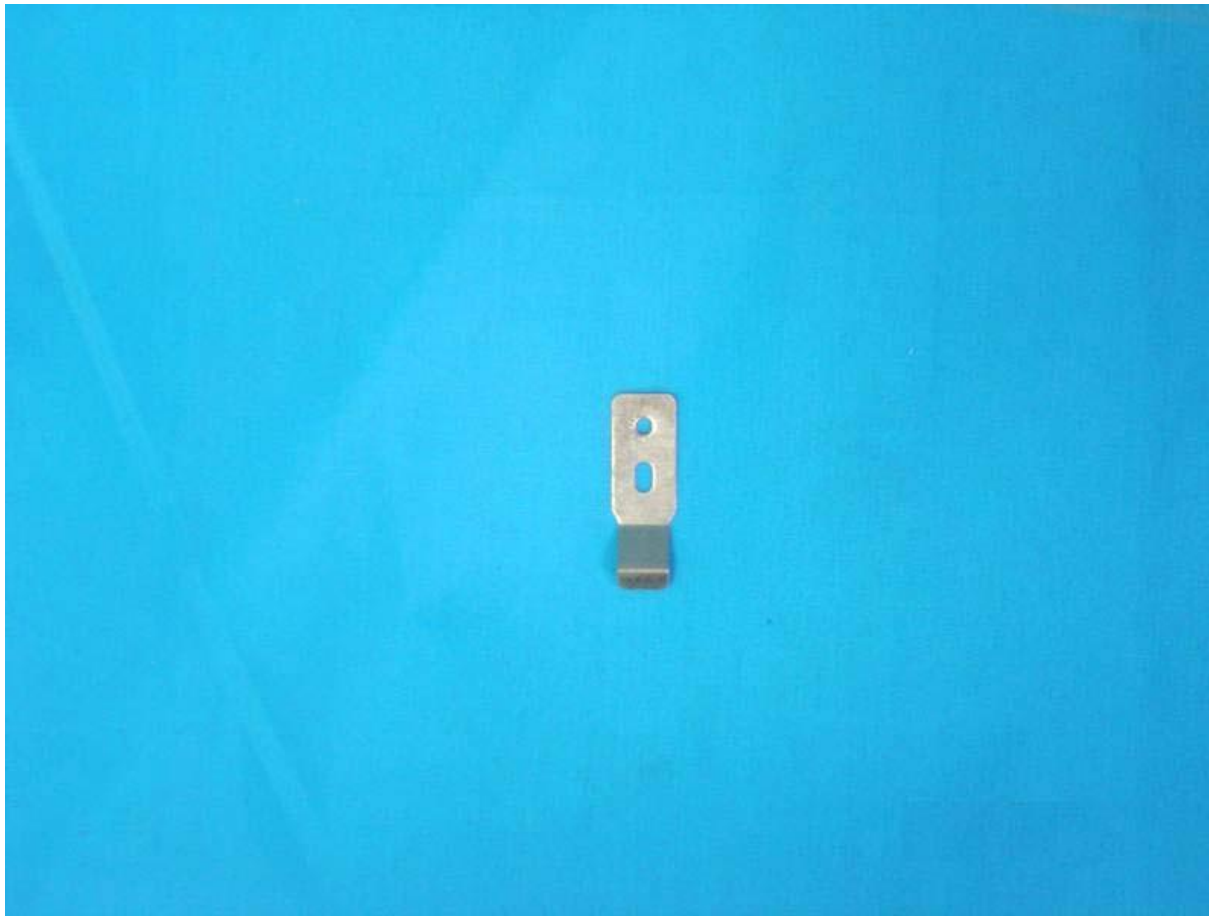


PRE-CHARGER SPRING PLATE < WJ02-2807-011-01>

Fig. 2-4

Note : Pre-Charger Spring Plate is for Main charger and Pre-charger

 2. SPARE PARTS

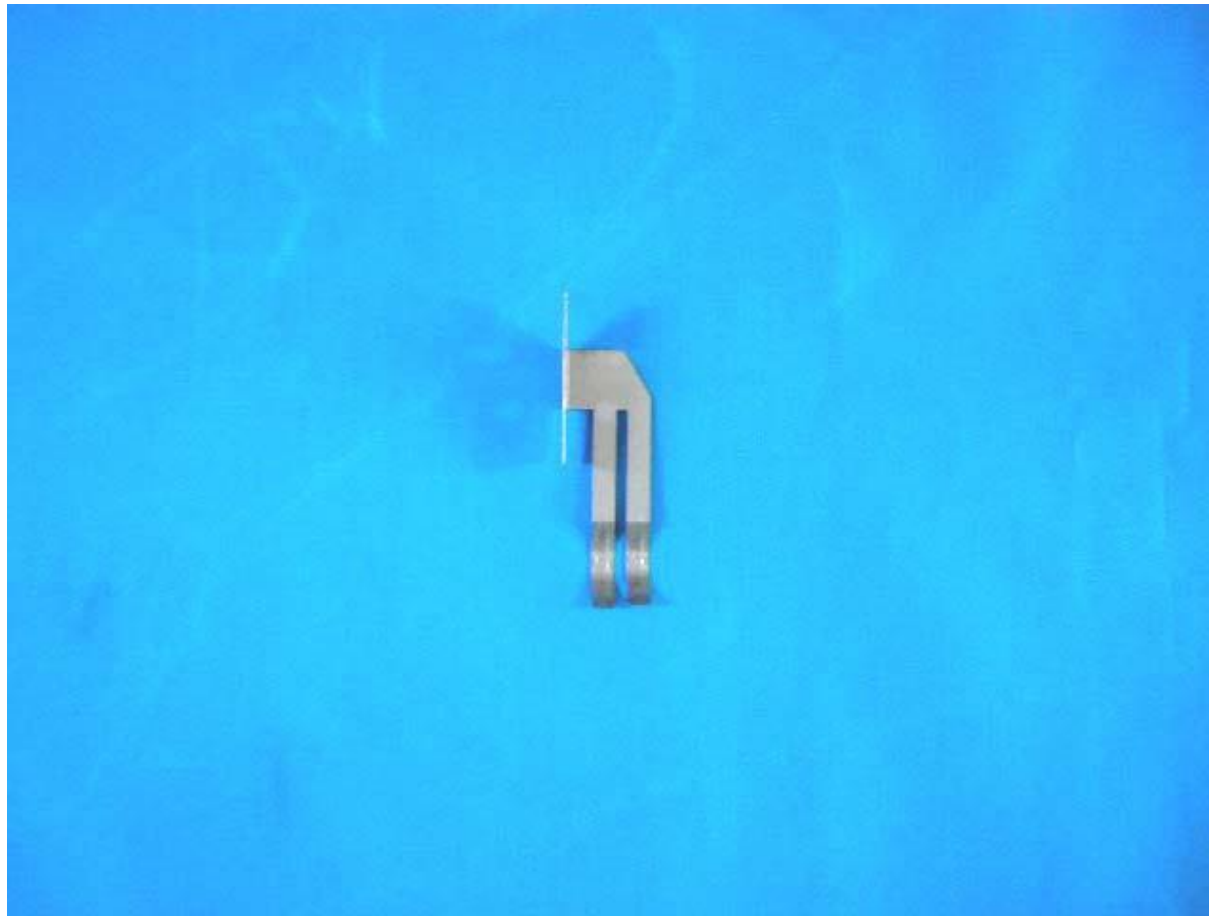

DRIVING SHAFT CONTACT < WJ02-2806-001-01>


Fig. 2-5

2. SPARE PARTS



SLAVE SHAFT CONTACT < WJ02-2806-002-01>
Fig. 2-6

 2. SPARE PARTS

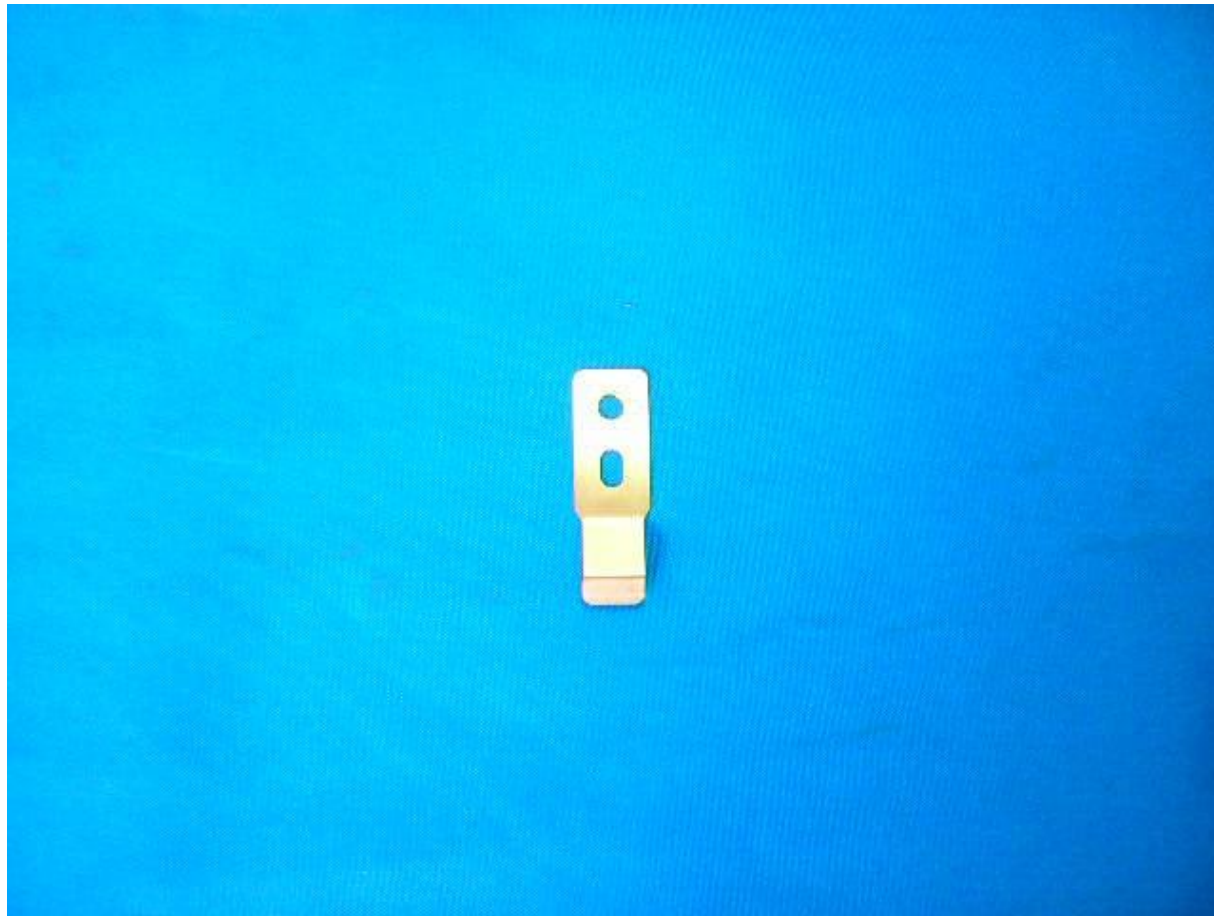

DRUM FIXED PLATE CONTACT < WJ02-2807-065-01>
Fig. 2-7

2. SPARE PARTS



O-RING (19x2 mm) <WJ02-3553-000-01>

Fig. 2-8

Note : O-ring (19x2mm) is used as PMS Sensor


2. SPARE PARTS



LED PRINT HEAD < WJ01-2530-000-01 >

Fig. 2-9

 
2. SPARE PARTS

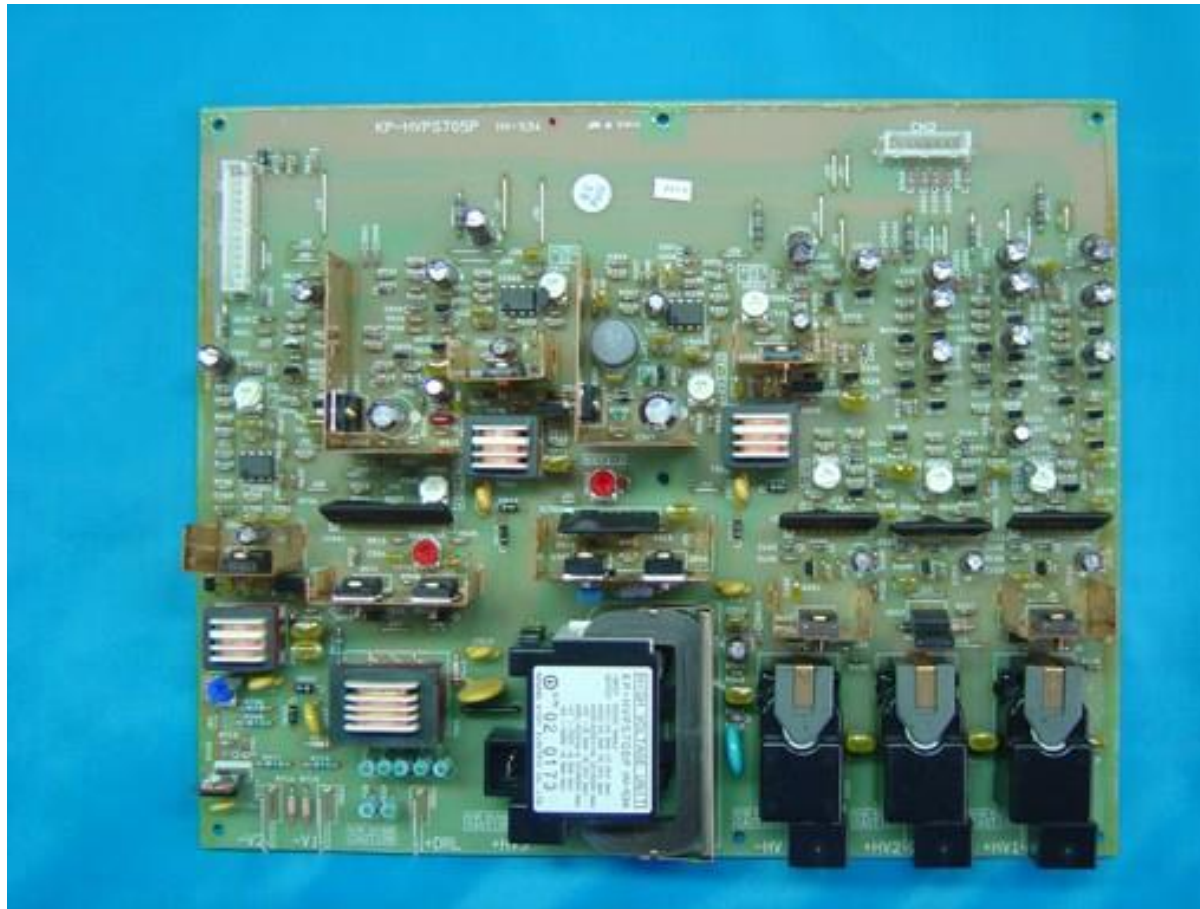

HIGH VOLTAGE POWER SUPPLY < WJ02-2717-001-01>

Fig. 2-10

 
2. SPARE PARTS

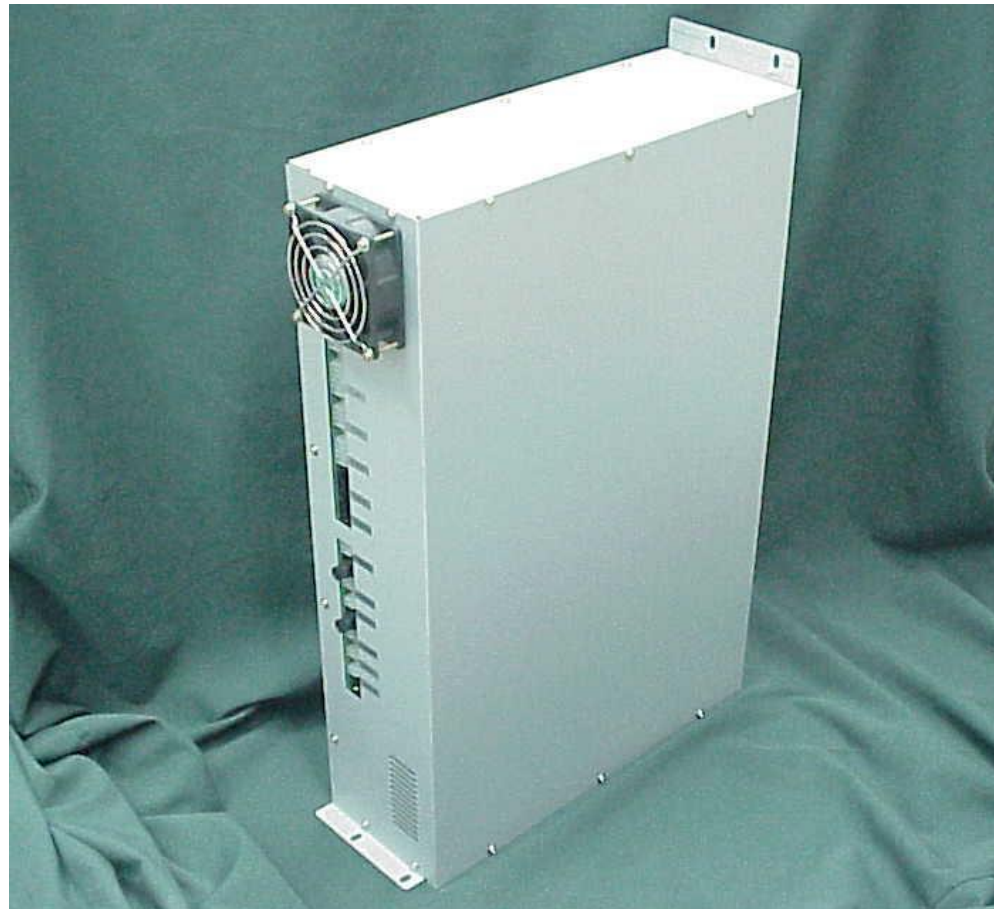

DC POWER SUPPLY (DPS02B) < WJ03-0407-002-01>


Fig. 2-11

 2. SPARE PARTS

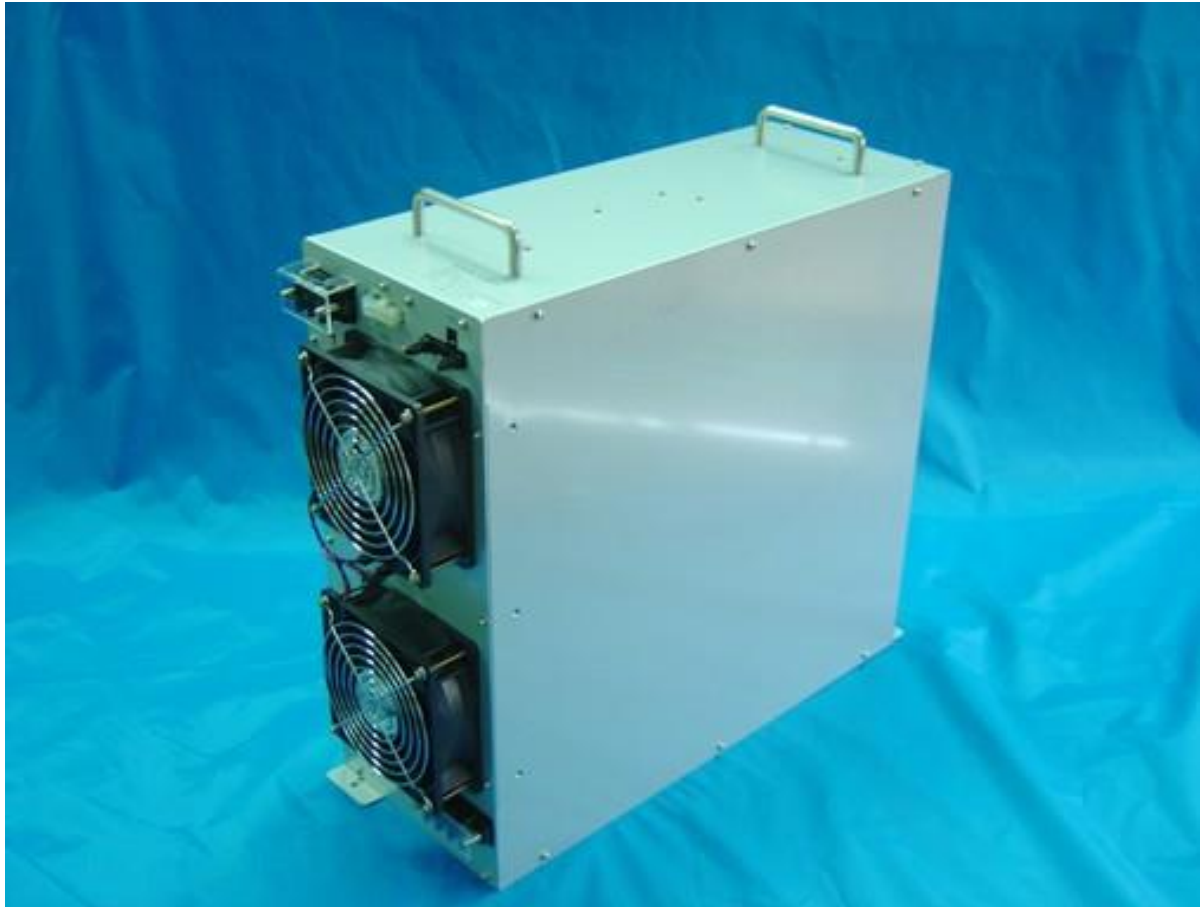

FLASH POWER SUPPLY (FP07A2-S) < WJ03-0537-008-01>
Fig. 2-12

 2. SPARE PARTS

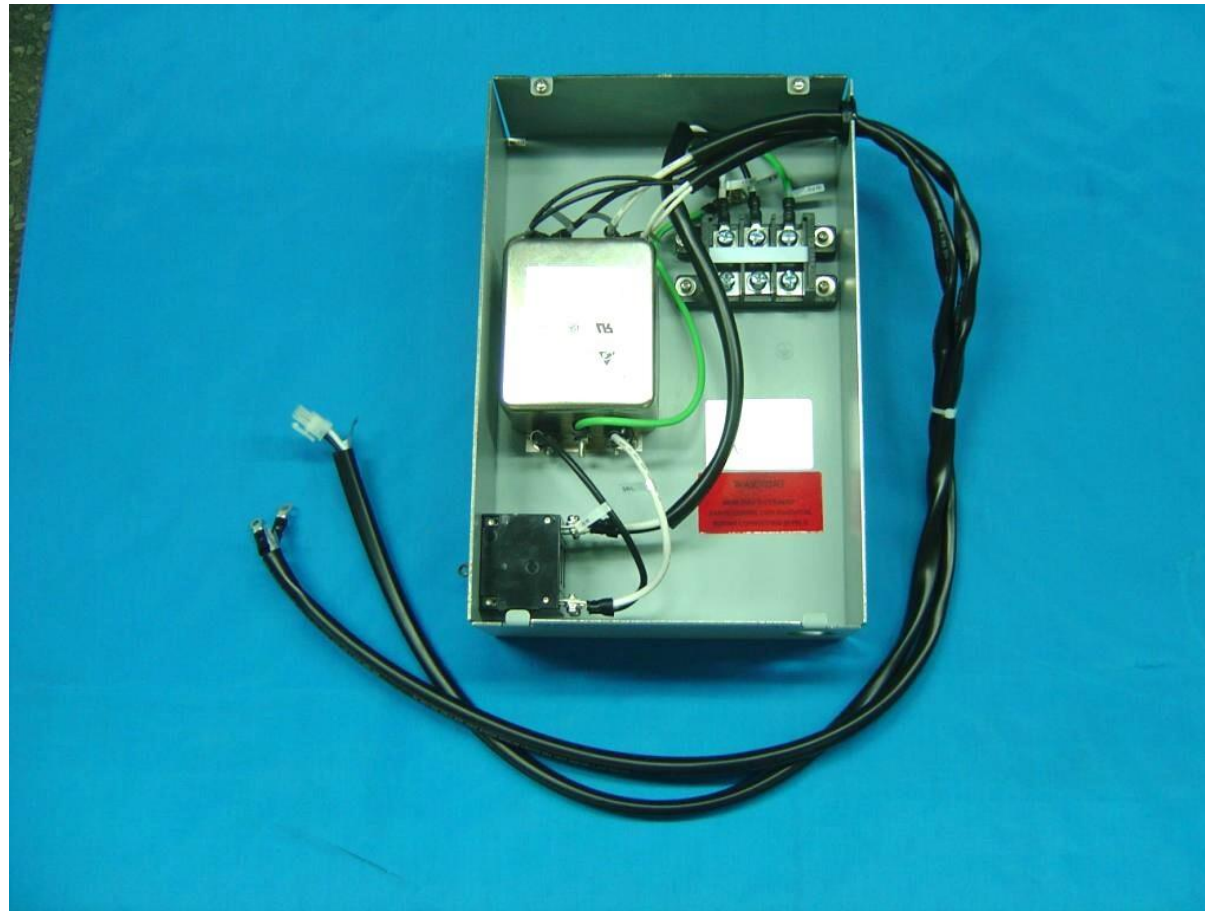

AC POWER TERMINAL BOX < WJ03-0409-003-01 >

Fig. 2-13


2. SPARE PARTS



FUSE SET < WJ03-0410-001-01>

Fig. 2-14

 2. SPARE PARTS

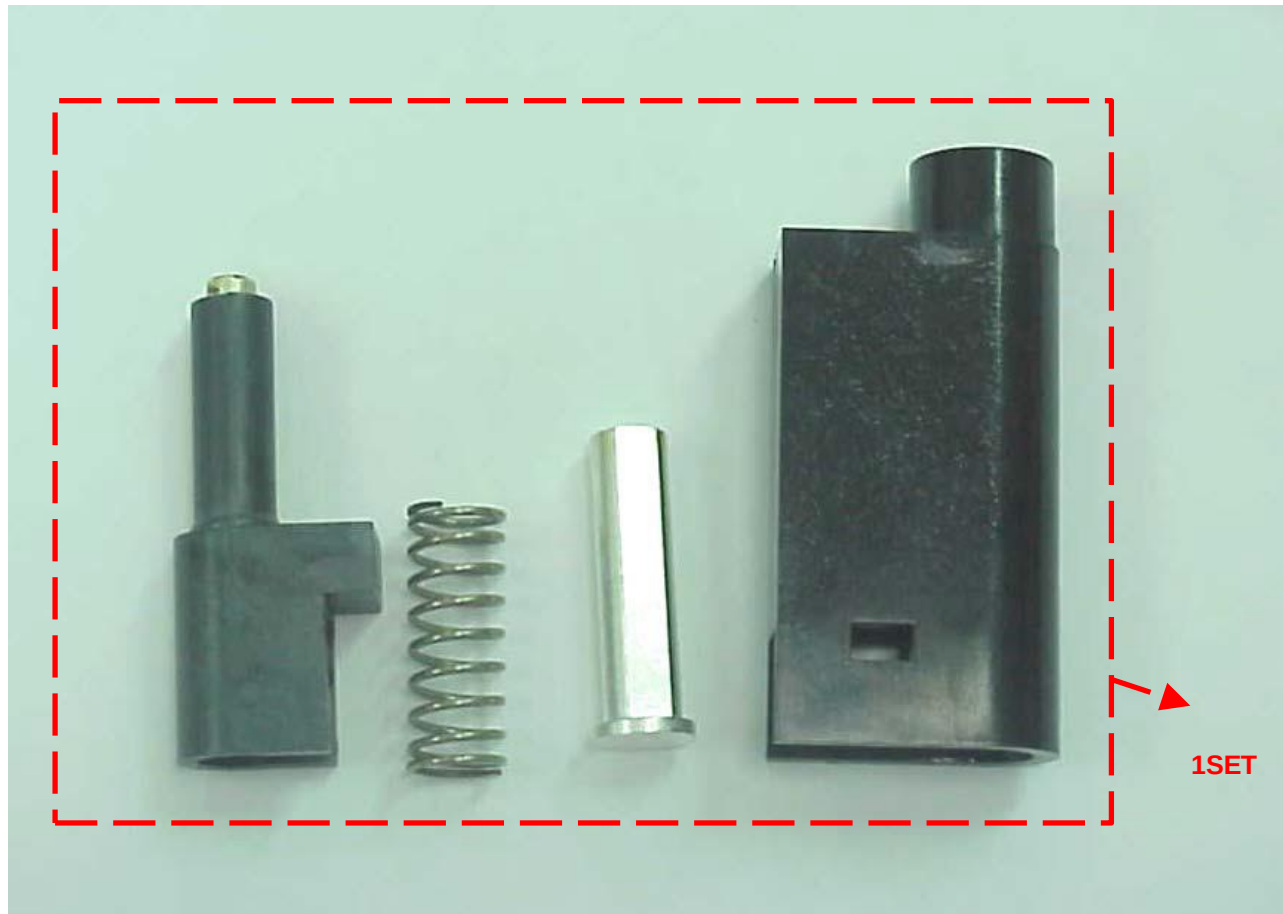

HV CONNECTOR FOR FUSER UNIT < WJ03-0411-002-01>

Fig. 2-15


2. SPARE PARTS



MAIN CHARGER CONNECTOR SET (+HV1) < WJ03-0459-097-01>
SEPARATOR CONNECTOR SET (+HV3) < WJ03-0459-094-01>
PRE-CHARGER CONNECTOR SET (+HV2) < WJ03-0459-098-01>
TRANSFER CHARGER CONNECTOR SET (-HV) < WJ03-0555-024-01>

Fig. 2-16

 2. SPARE PARTS

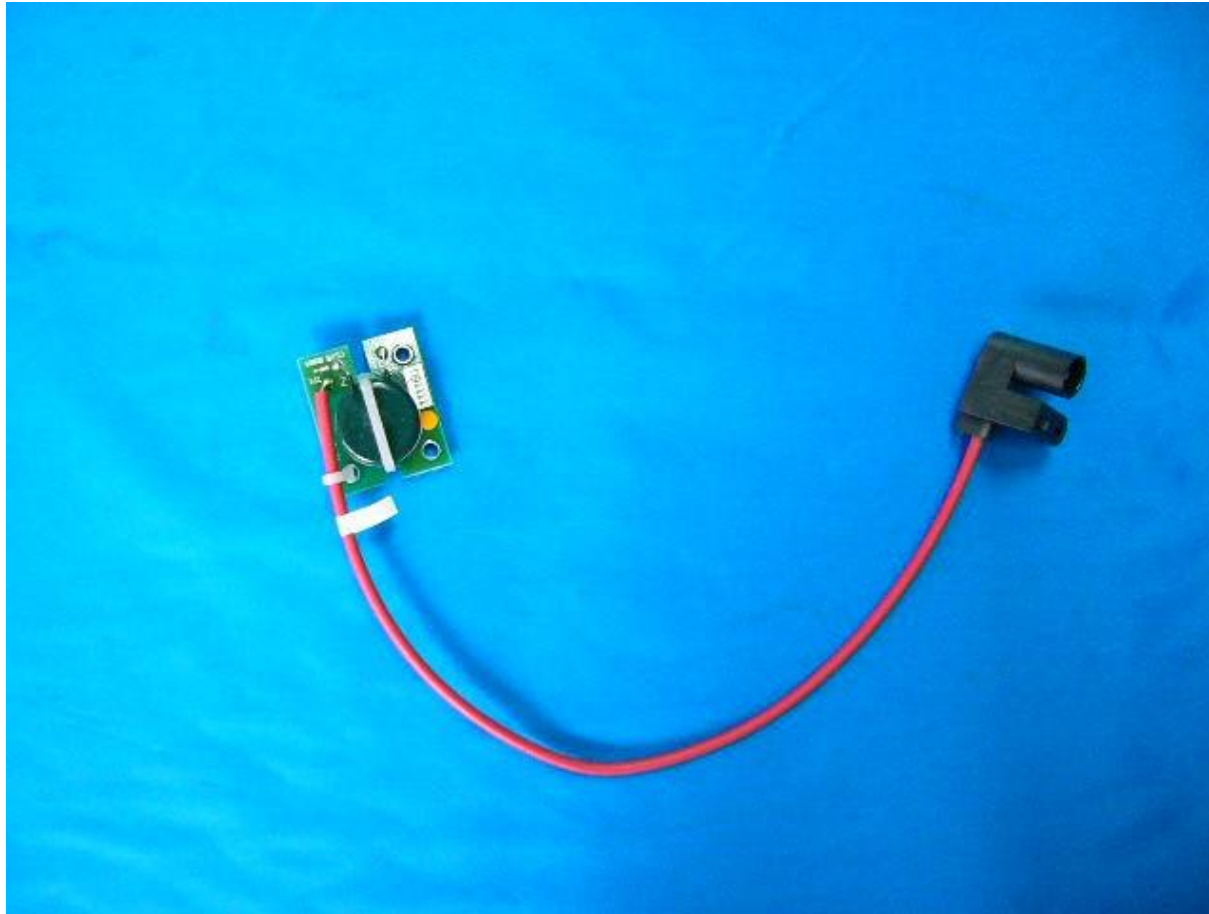

VARISTOR CONNECTOR SET < WJ03-0459-116-01>

Fig. 2-17


2. SPARE PARTS



FUSER UNIT < WJ03-0413-000-01>

Fig. 2-18

 2. SPARE PARTS

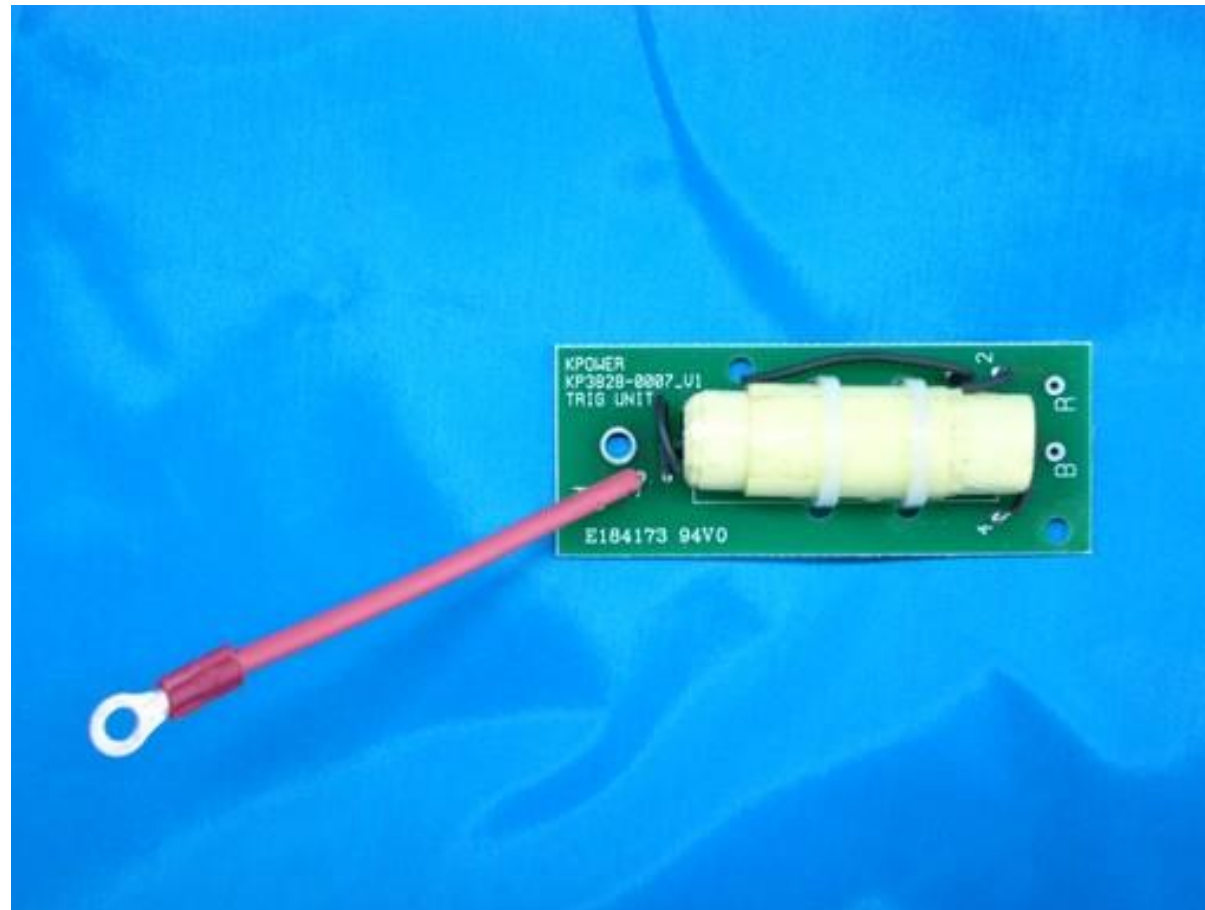

XENON LAMP TRIGGER COIL UNIT < WJ03-0414-000-01>

Fig. 2-19


2. SPARE PARTS



SIGNAL CONNECTOR FOR FUSER UNIT <WJ03-0459-072-01>

Fig. 2-20

 2. SPARE PARTS

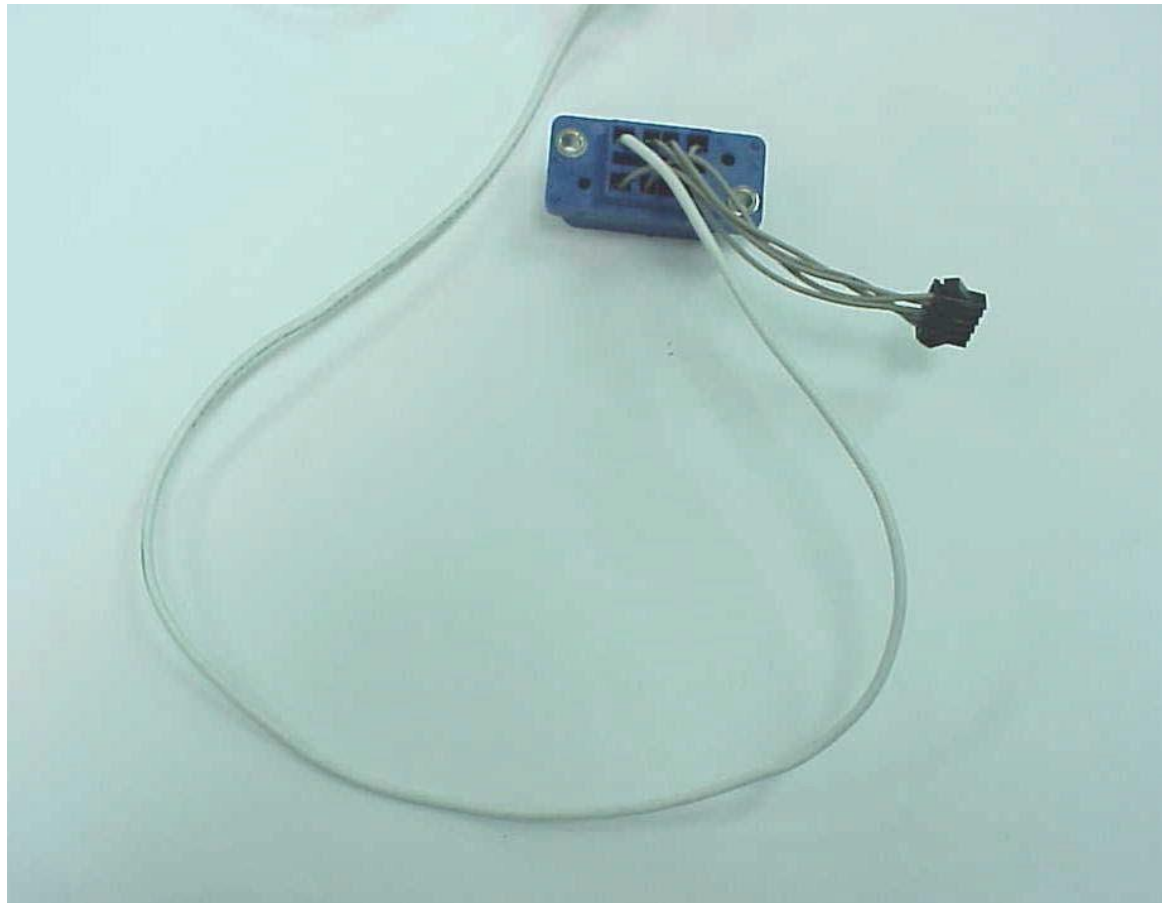

CONNECTOR FOR TRANSPORT UNIT < WJ03-0555-044-01>

Fig. 2-21

2. SPARE PARTS



CONNECTOR FOR DEVELOPING UNIT < WJ03-0459-083-01>

Fig. 2-22

2. SPARE PARTS



KMPU BOARD REV3.1 < WJ03-0594-324-01>

Fig. 2-23


2. SPARE PARTS



DCMTR DRV BOARD (NU-FZ5037) < WJ02-3555-005-01>

Fig. 2-24

 
2. SPARE PARTS

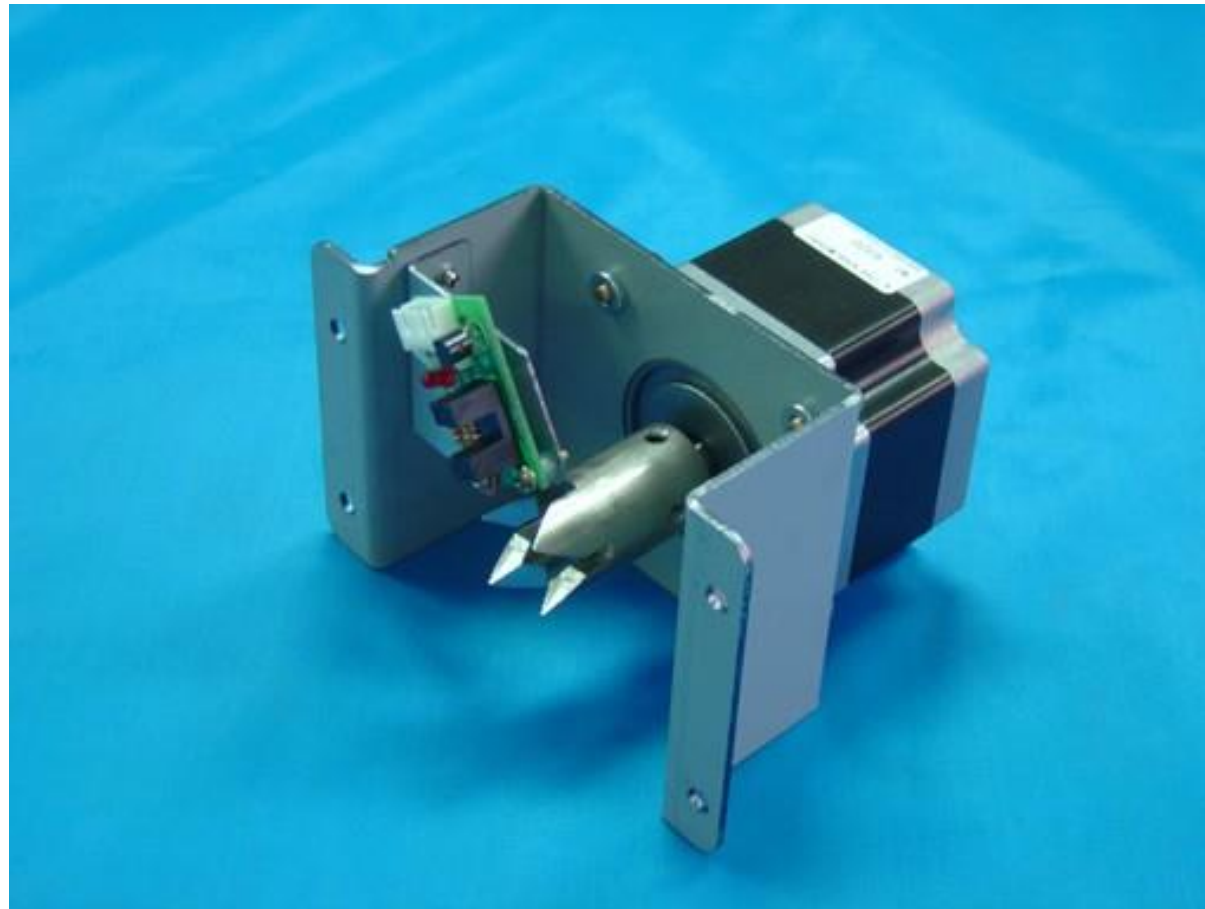

ELEVATOR MOTOR UNIT < WJ03-0553-001-01>

Fig. 2-25

 
2. SPARE PARTS

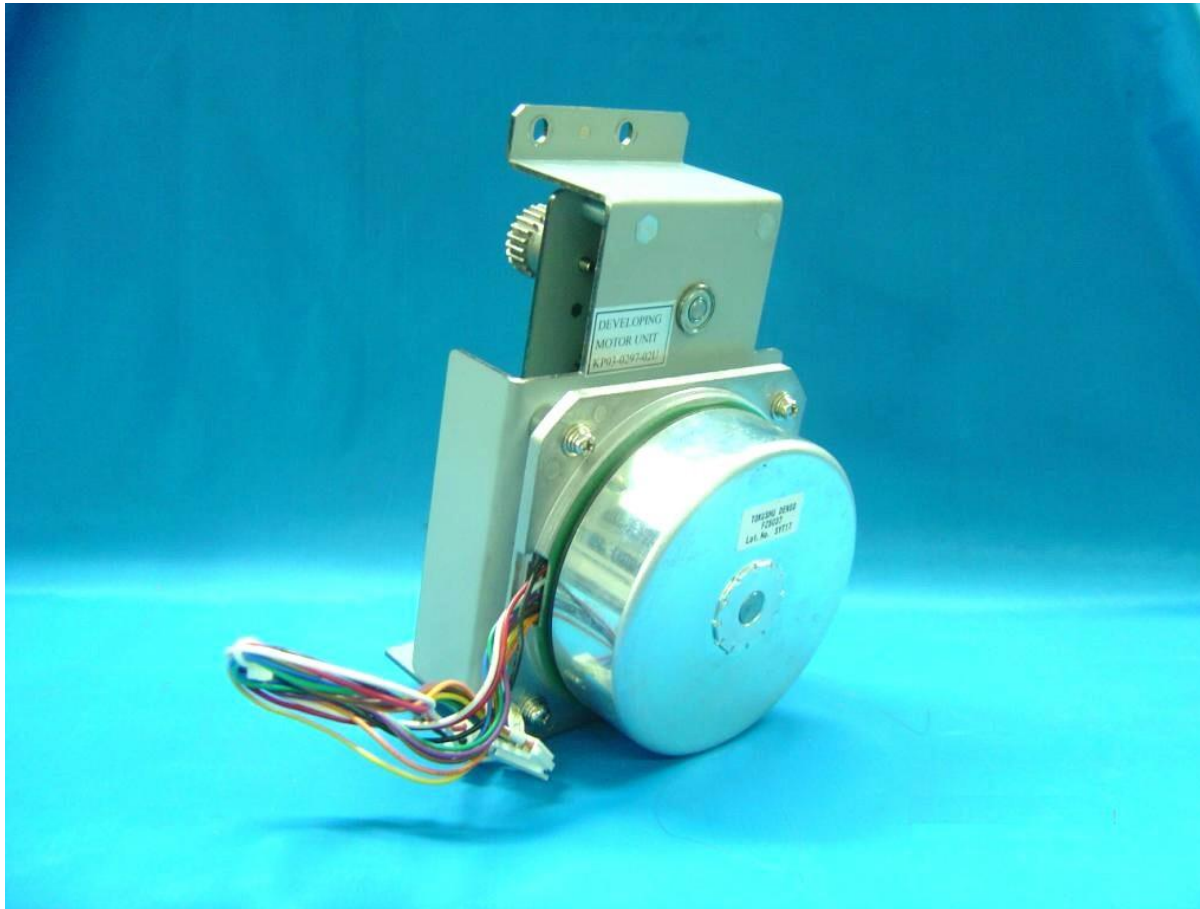

DEVELOPING MOTOR UNIT < WJ03-0399-005-01>

Fig. 2-26

 2. SPARE PARTS

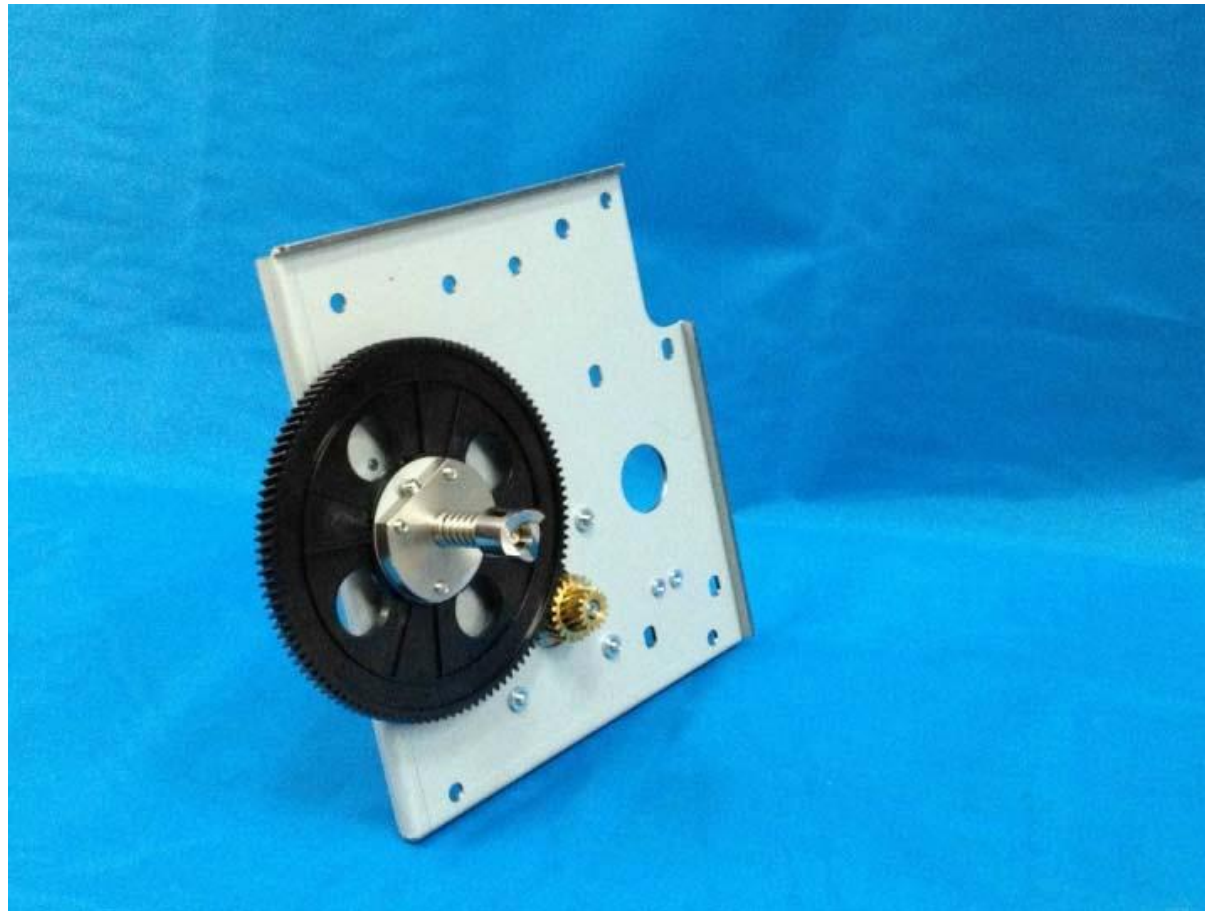

DRUM MOTOR UNIT < WJ03-0430-005-01>

Fig. 2-27


2. SPARE PARTS



PAPER OUT MOTOR UNIT < WJ03-0571-000-01>

Fig. 2-28

 
2. SPARE PARTS

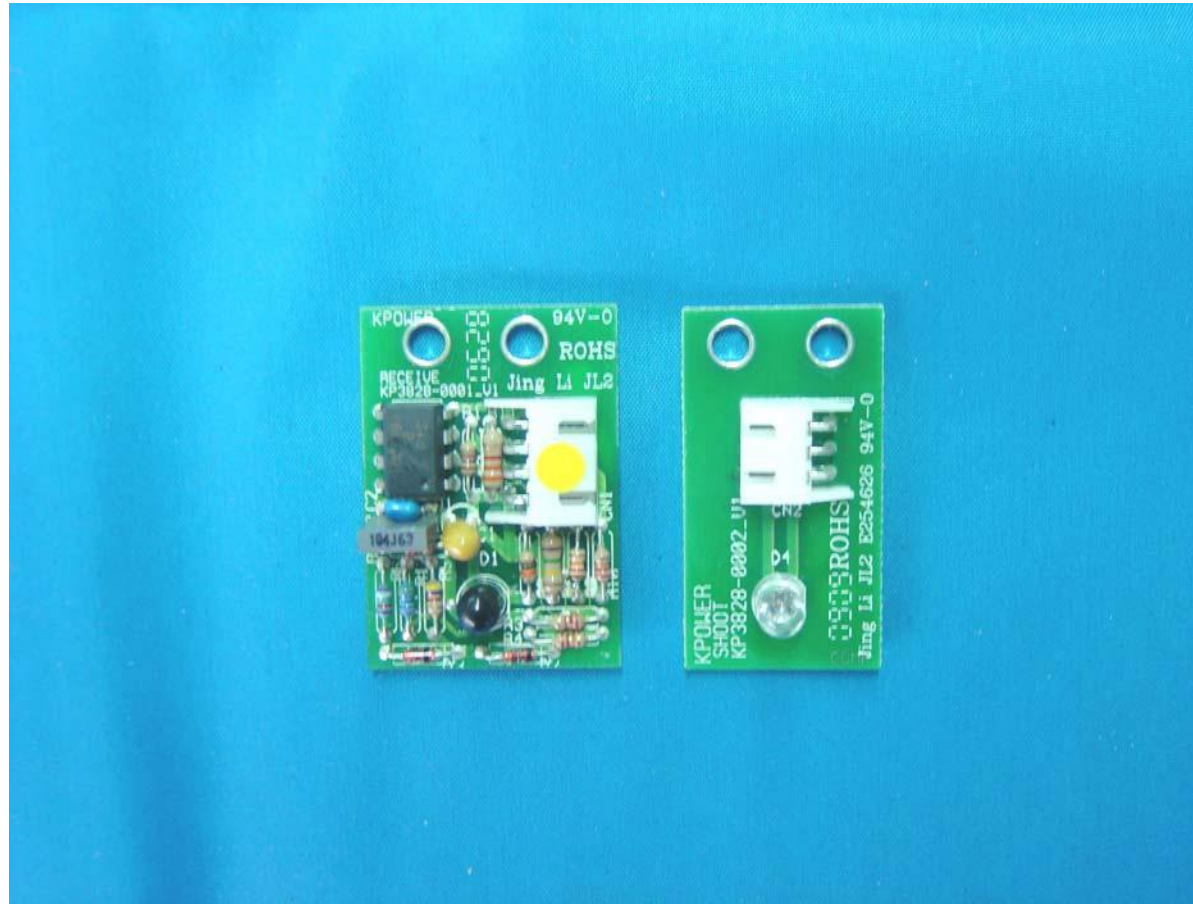

WASTE TONER FULL SENSOR < WJ03-0419-000-01>

Fig. 2-29

 2. SPARE PARTS

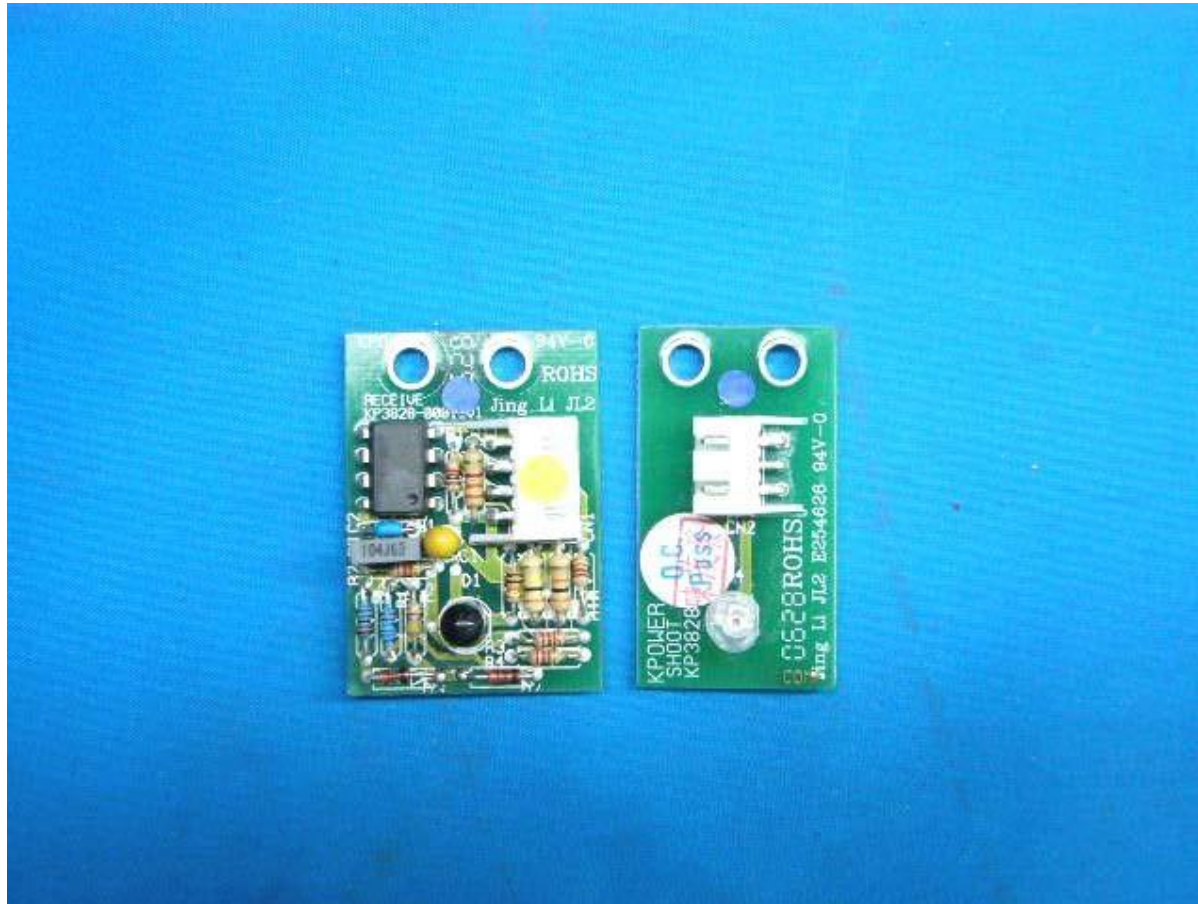

CROSS SENSOR < WJ03-0420-000-01>

Fig. 2-30

Note : Cross Sensor is used as Paper Empty Sensor

2. SPARE PARTS




SENSOR PS-R50D < WJ02-2718-000-01>

Fig. 2-31

Note : Sensor PS-R50D is used as Paper Top Sensor

 
2. SPARE PARTS

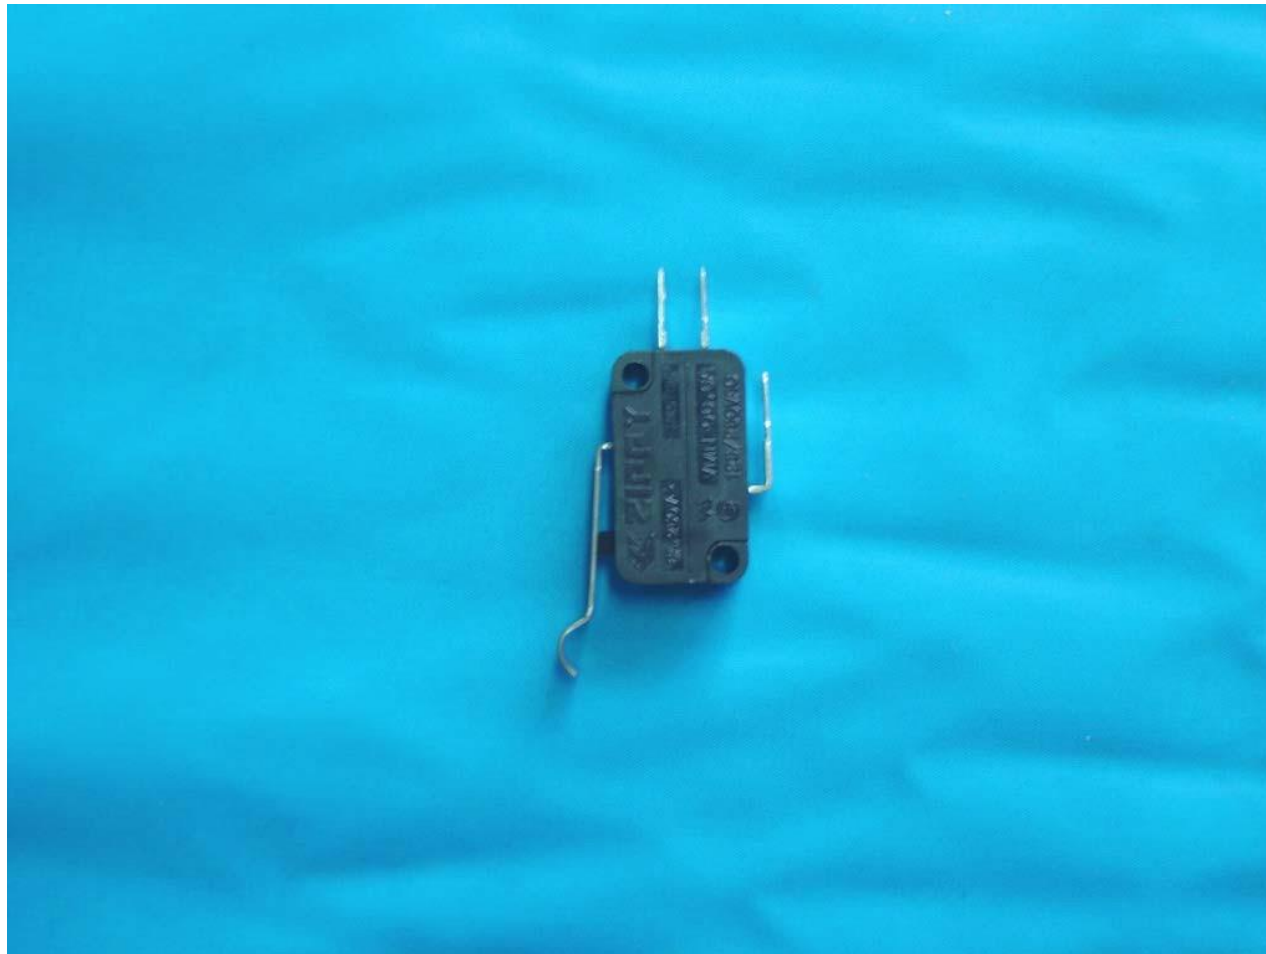

MICRO SWITCH < WJ02-3614-000-01>

Fig. 2-32

 
2. SPARE PARTS

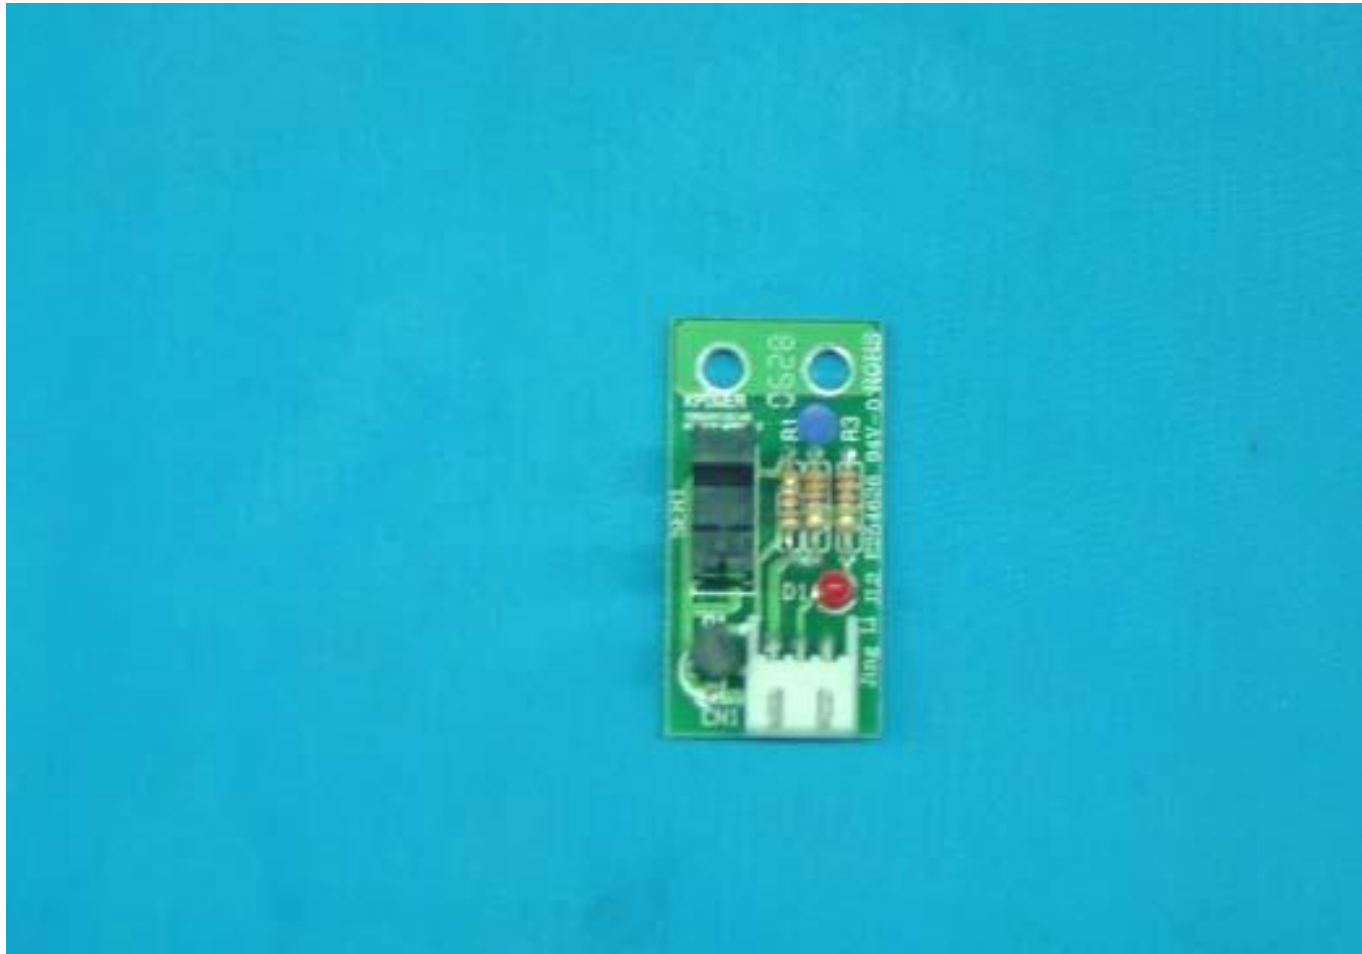

INTERRUPT SENSOR <WJ03-0421-000-01>

Fig. 2-33

 2. SPARE PARTS

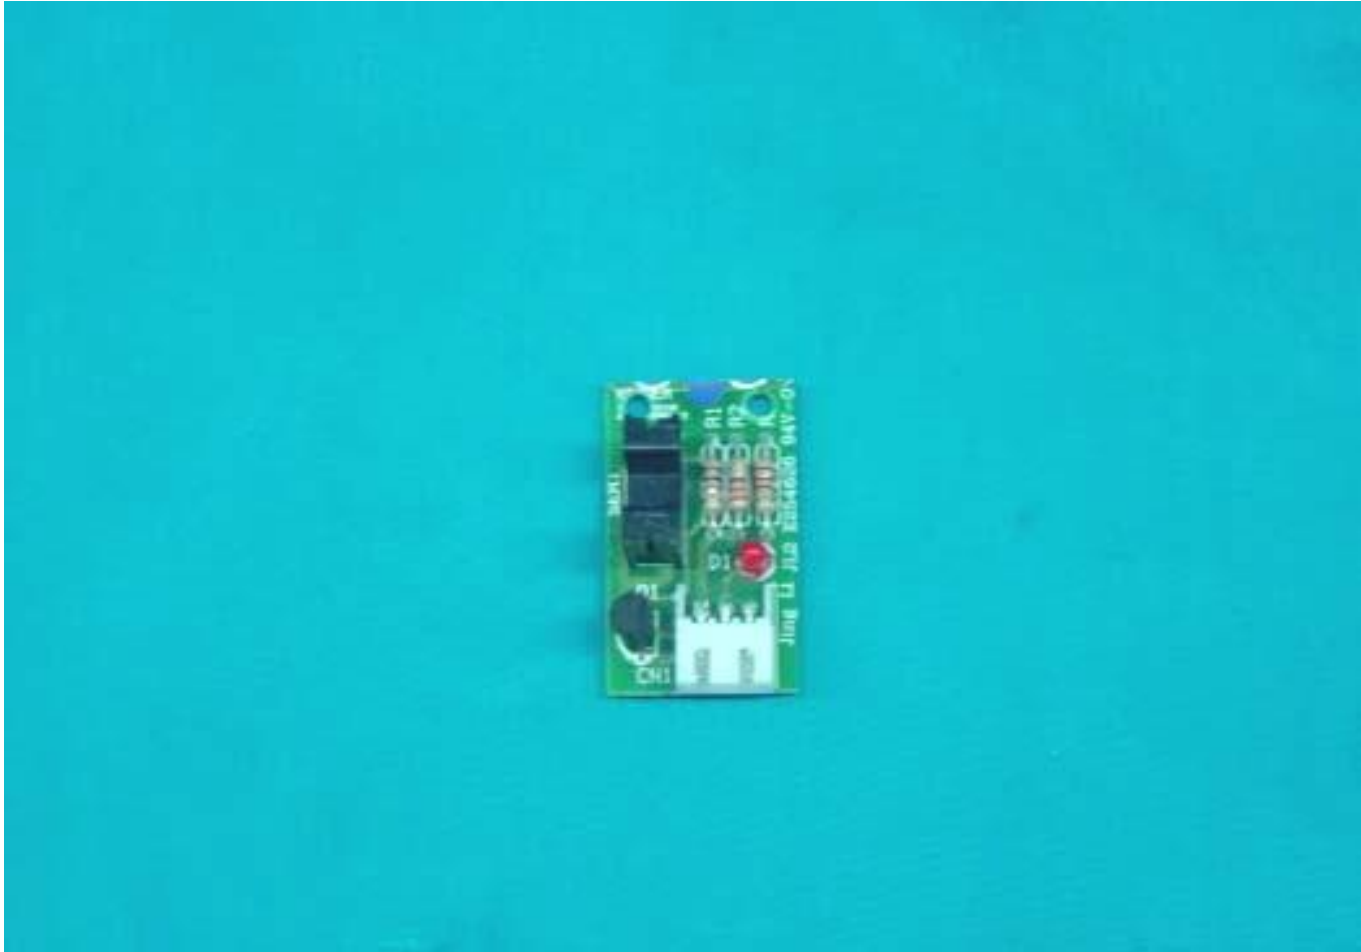

INTERRUPT SENSOR < WJ03-0421-001-01>

Fig. 2-34


2. SPARE PARTS



FRONT COVER SENSOR < WJ03-0467-000-01>

Fig. 2-35

 2. SPARE PARTS

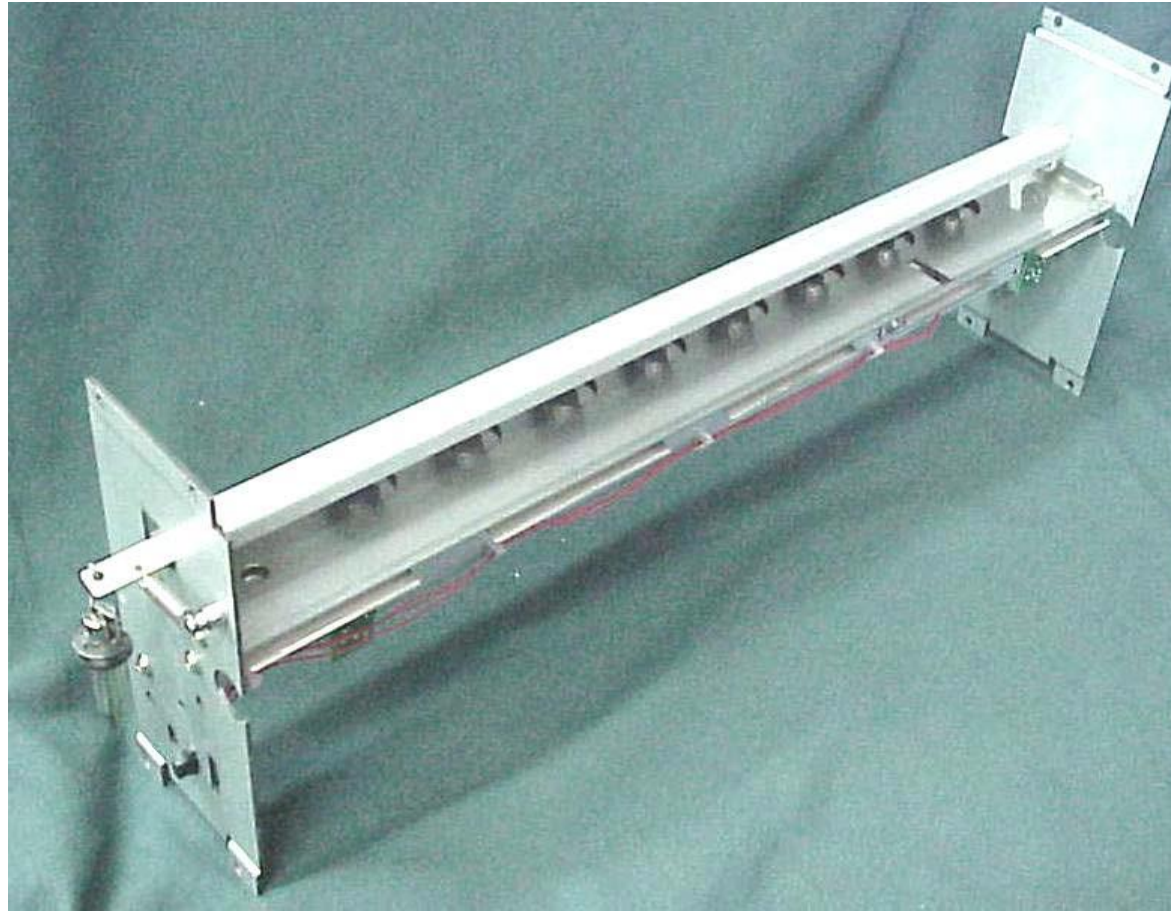

PAPER OUT UNIT (INCLUDE SPLITTER) < WJ03-0404-013-01>

Fig. 2-36

2. SPARE PARTS



FUSER COVER GLASS < WJ03-0640-000-01>

Fig. 2-37

2. SPARE PARTS



ERASE LAMP UNIT < WJ03-0547-001-01>

Fig. 2-38

2. SPARE PARTS



BLOWER UNIT < WJ03-0416-000-01>

Fig. 2-39

Note: Blower Unit is used as Air Filter

2. SPARE PARTS



FUSER EXIT BLOWER UNIT < WJ03-0417-000-01>

Fig. 2-40

2. SPARE PARTS



FAN (12 cm) <WJ03-0460-000-01>

Fig. 2-41

Note: FAN (12cm) is used as Rear cover fan (Upper)

2. SPARE PARTS



FAN (15 cm) < WJ02-3684-000-01>

Fig. 2-42

Note: FAN (15 cm) is used as Rear cover fan (Lower)

2. SPARE PARTS



SUCTION FAN < WJ03-0433-000-01>

Fig. 2-43

2. SPARE PARTS



MPU FAN (6 cm) < WJ03-0461-002-01>

PO FAN (6 cm)< WJ03-0461-004-01>

Fig. 2-44

Note: MPU FAN (6 cm) is used as KMPU, PO FAN (6 cm) is used as Paper Out

2. SPARE PARTS



SPLITTER SOLENOID < WJ03-0441-001-01>

Fig. 2-45

2. SPARE PARTS



TRANSPORT UNIT < WJ03-0769-001-01>
Fig. 2-46


2. SPARE PARTS



REFLECTION PLATE < WJ02-2614-012-01>

Fig. 2-47

 
2. SPARE PARTS

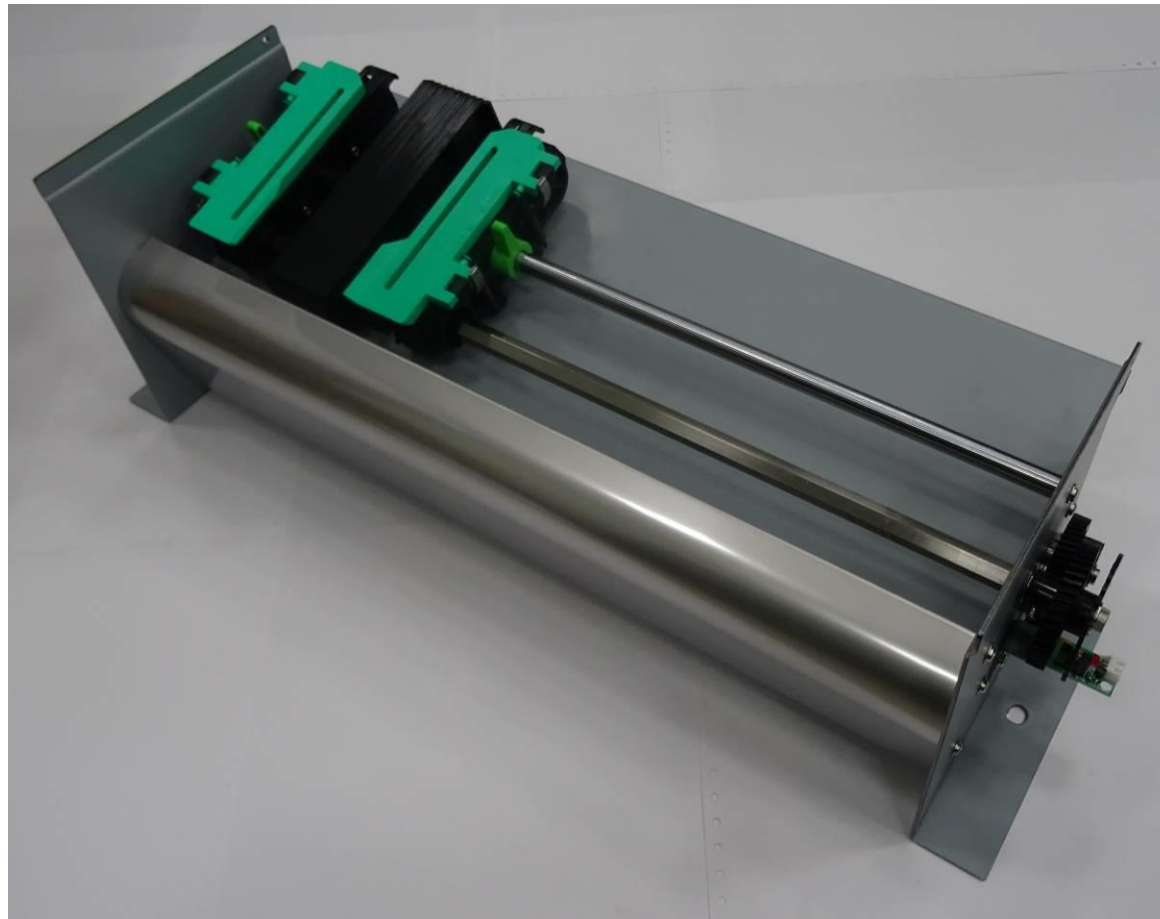

TRACTOR UNIT < WJ03-0769-003-01>

Fig. 2-48

 2. SPARE PARTS

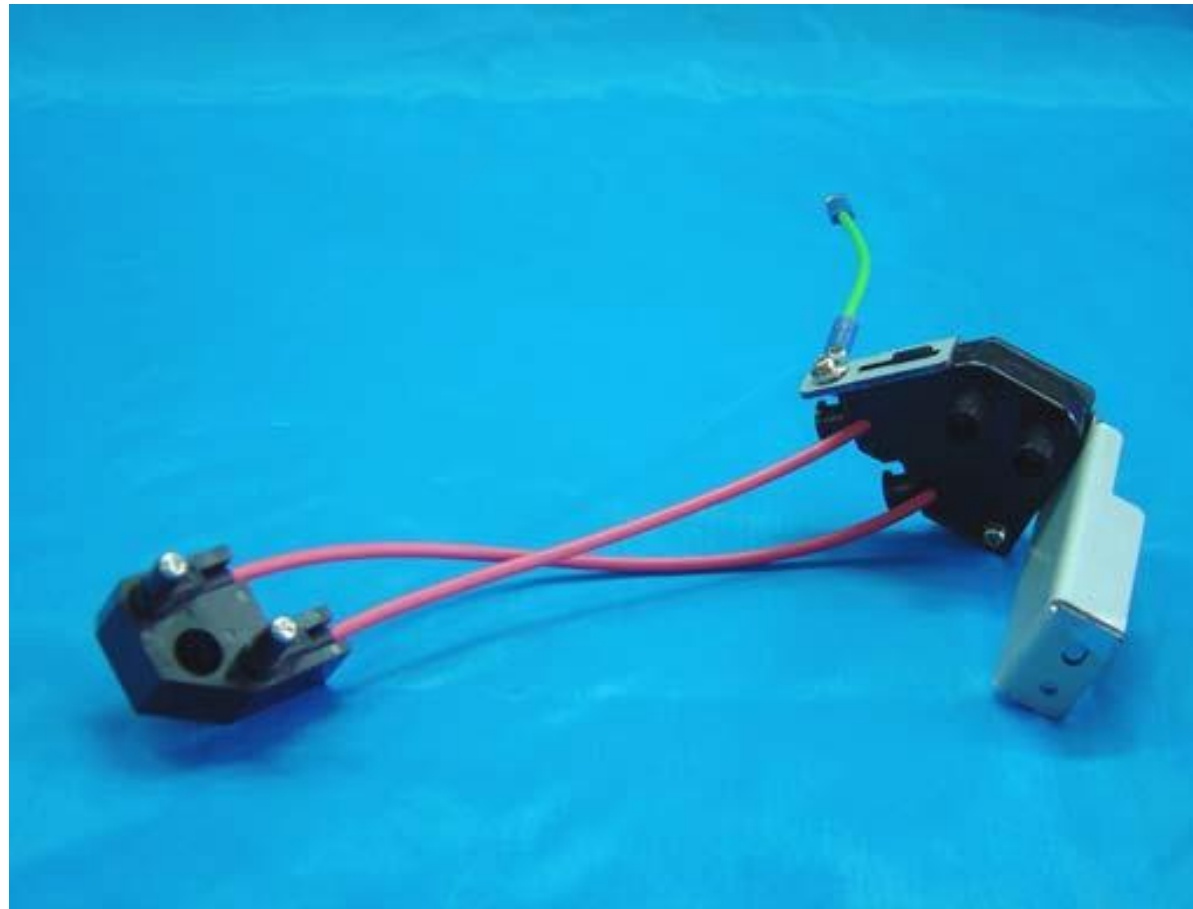

HV CONNECTOR FOR TRANSPORT UNIT < WJ03-0471-000-01>

Fig. 2-49

2. SPARE PARTS



ENGLISH OPERATION PANEL < WJ03-0438-002-01>
Fig. 2-50

2. SPARE PARTS



DRUM SURFACE POTENTIAL SENSOR UNIT < WJ01-0791-000-01>

Fig. 2-51

2. SPARE PARTS



LED ARRAY THERMAL SENSOR <KP03-0357-078-01>

Fig. 2-52

2. SPARE PARTS



FAN (8 cm) <WJ03-0462-002-01>

Fig. 2-53

Note : Fan (8 cm) is used as Fuser unit Upper

2. SPARE PARTS



COMPRESSION SPRING OF DEVELOPER MOTOR UNIT < WJ02-2740-001-01>

Fig. 2-54

2. SPARE PARTS



DEVELOPING MOTOR UNIT DRIVING CLAW < WJ02-2809-001-01>

Fig. 2-55


2. SPARE PARTS



BEARING (6900ZZNR) < WJ02-2850-001-01>

Fig. 2-56

 
2. SPARE PARTS

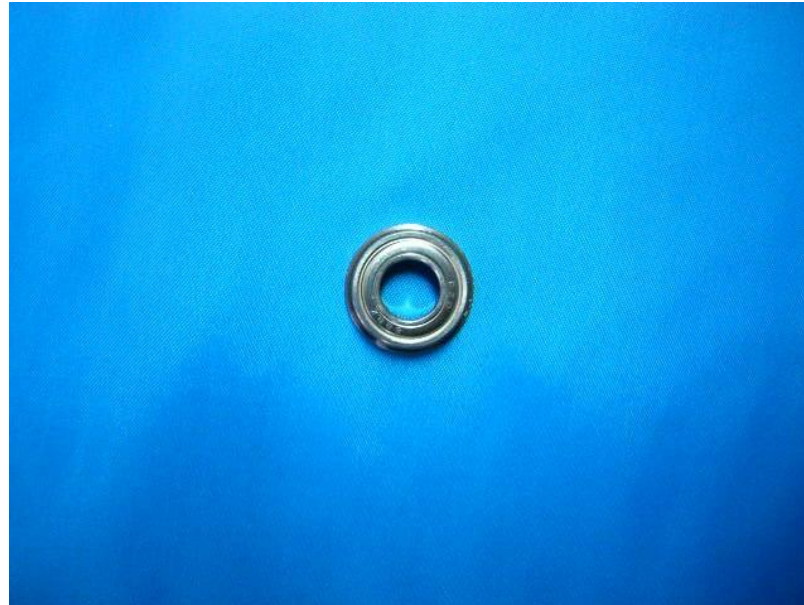

BEARING (F688ZZ / LF-1680) < WJ02-2852-001-01>


Fig. 2-57

 2. SPARE PARTS

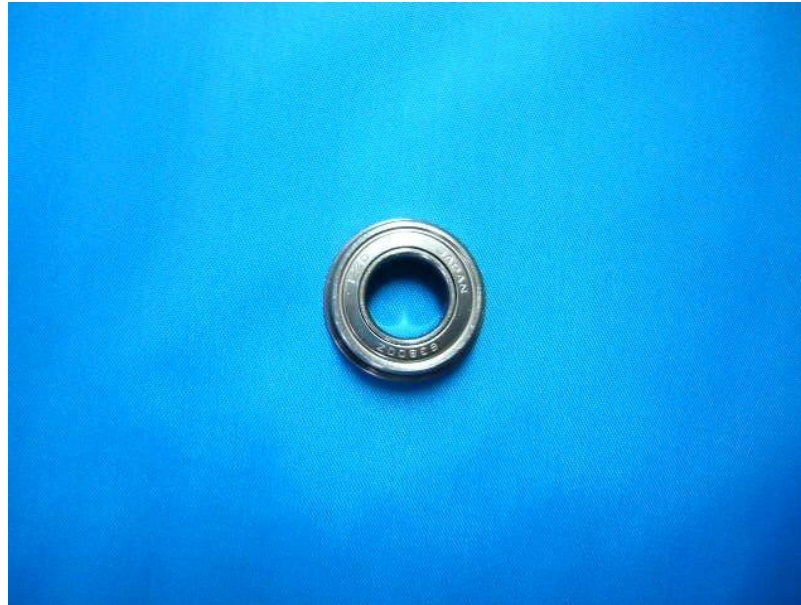

BEARING (F63800ZZ) < WJ02-2868-001-01>

 Fig. 2-58

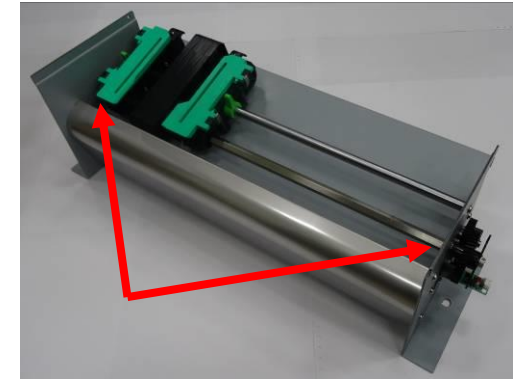

2. SPARE PARTS



BEARING (F63801ZZ) < WJ02-2892-000-01>

Fig. 2-59



2. SPARE PARTS



BEARING (6004ZZ) < WJ02-2853-000-01>

Fig. 2-60

Note : Bearing (6004ZZ) is used as Drum Shaft

3. STACKER SPARE PARTS



PULL-UP SPRING < WJ02-2024-000-01>

Fig. 3-1

3. STACKER SPARE PARTS



ROLLER MOTOR UNIT (W/GAR) < WJ03-0445-002-01>

Fig. 3-2

3. STACKER SPARE PARTS



ROLLER UNIT < WJ03-0402-001-01>


Fig. 3-3

3. STACKER SPARE PARTS



PADDLE MOTOR UNIT < WJ03-0332-000-01>
Fig. 3-4

 
3. STACKER SPARE PARTS

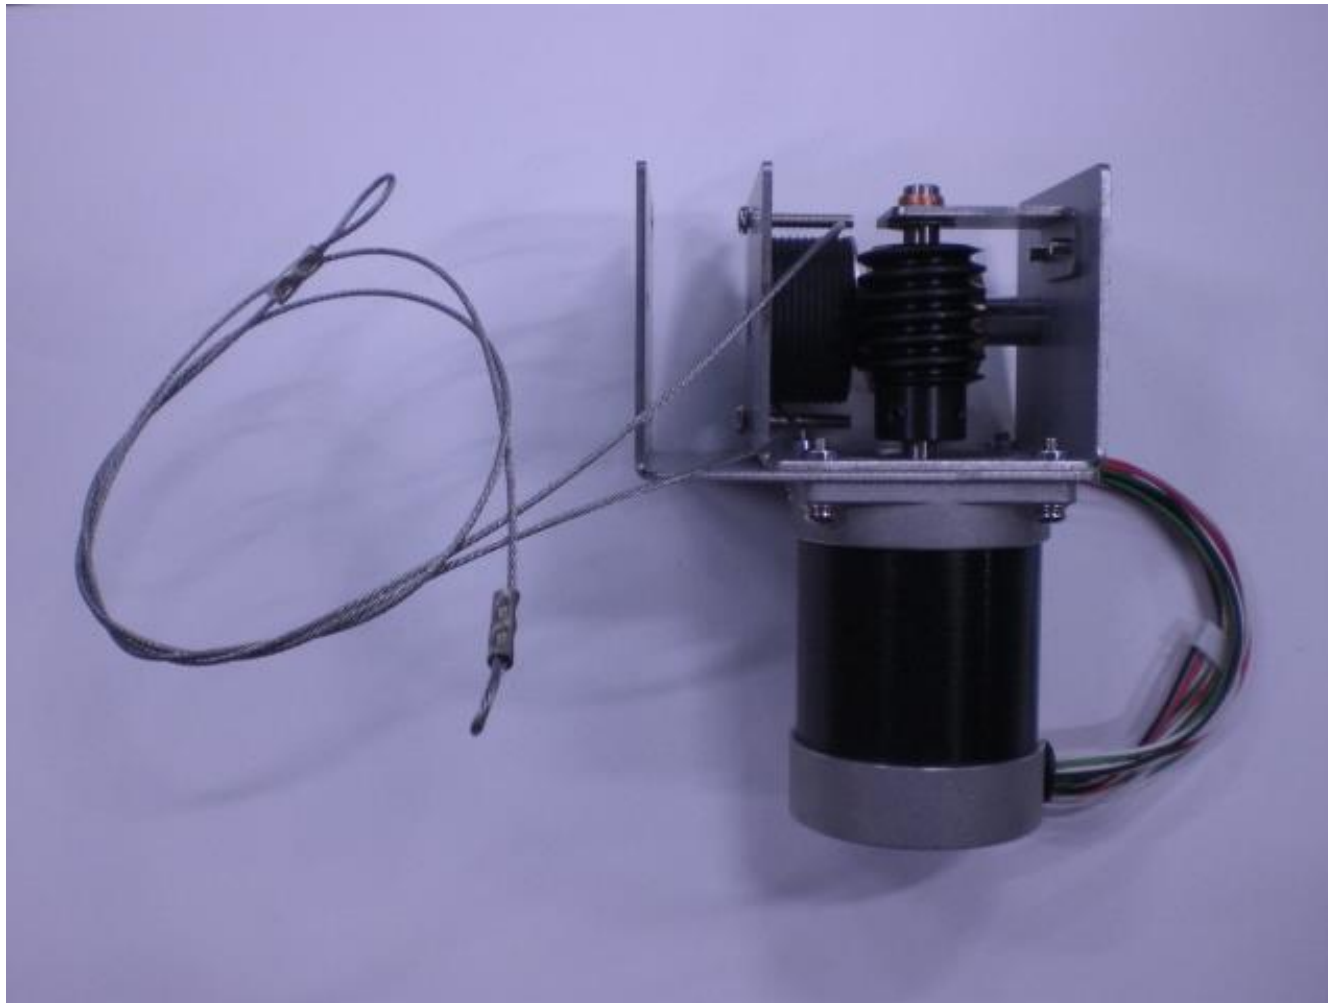

DOWN MOTOR UNIT (W/GEAR) < WJ03-0447-001-01>

Fig. 3-5

 3. STACKER SPARE PARTS

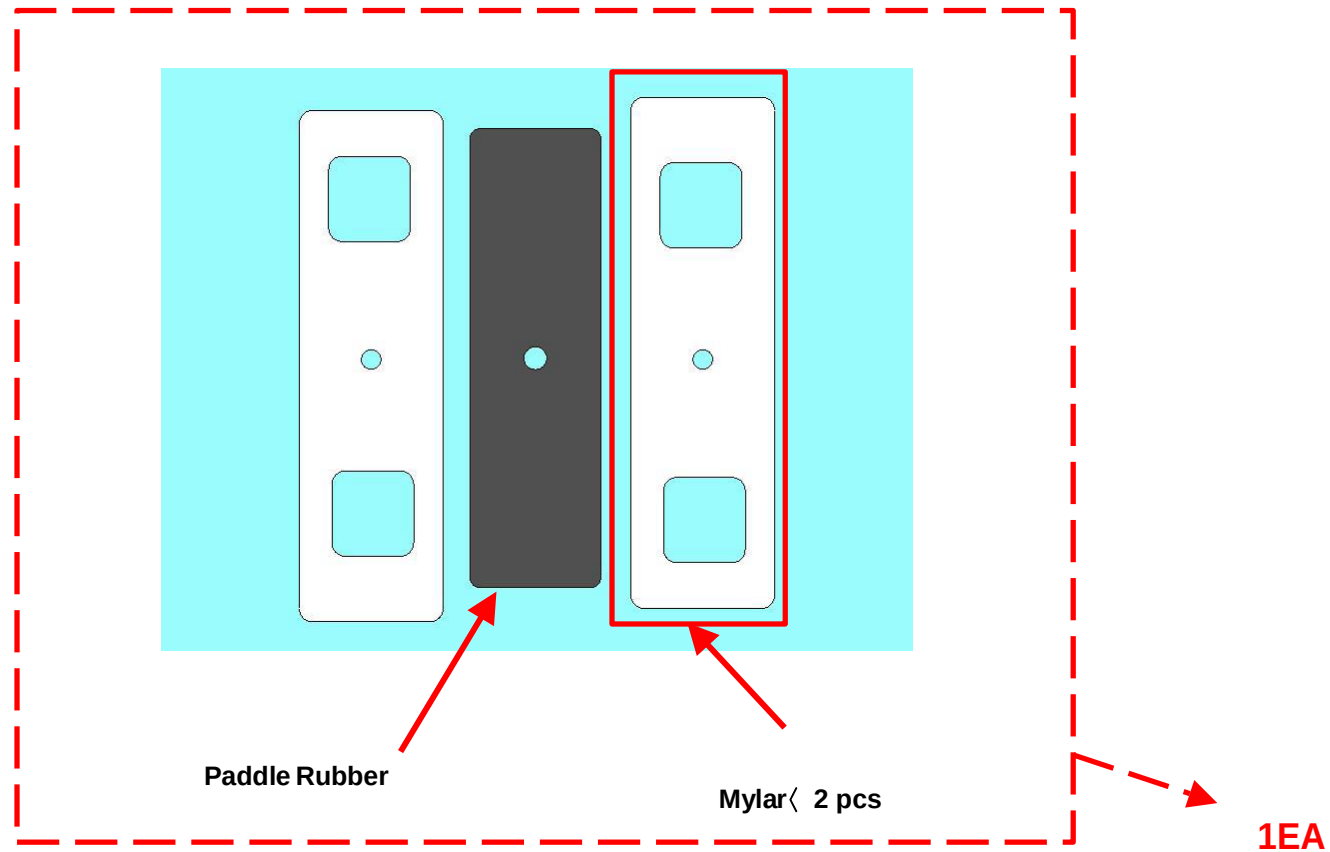

PADDLE RUBBER UNIT < WJ02-1761-000-01>

Fig. 3-6

3. STACKER SPARE PARTS



LEFT UPPER BRACKET < WJ02-2714-001-01>

Fig. 3-7

3. STACKER SPARE PARTS



RIGHT UPPER BRACKET < WJ02-2714-002-01>

Fig. 3-8

3. STACKER SPARE PARTS



BASE BRACKET < WJ02-2714-003-01>

Fig. 3-9

3. STACKER SPARE PARTS



FRONT PAPER GUIDE UNIT < WJ03-0435-000-01>

Fig. 3-10


3. STACKER SPARE PARTS



REAR PAPER GUIDE UNIT < WJ02-2828-001-01>

Fig. 3-11

 3. STACKER SPARE PARTS

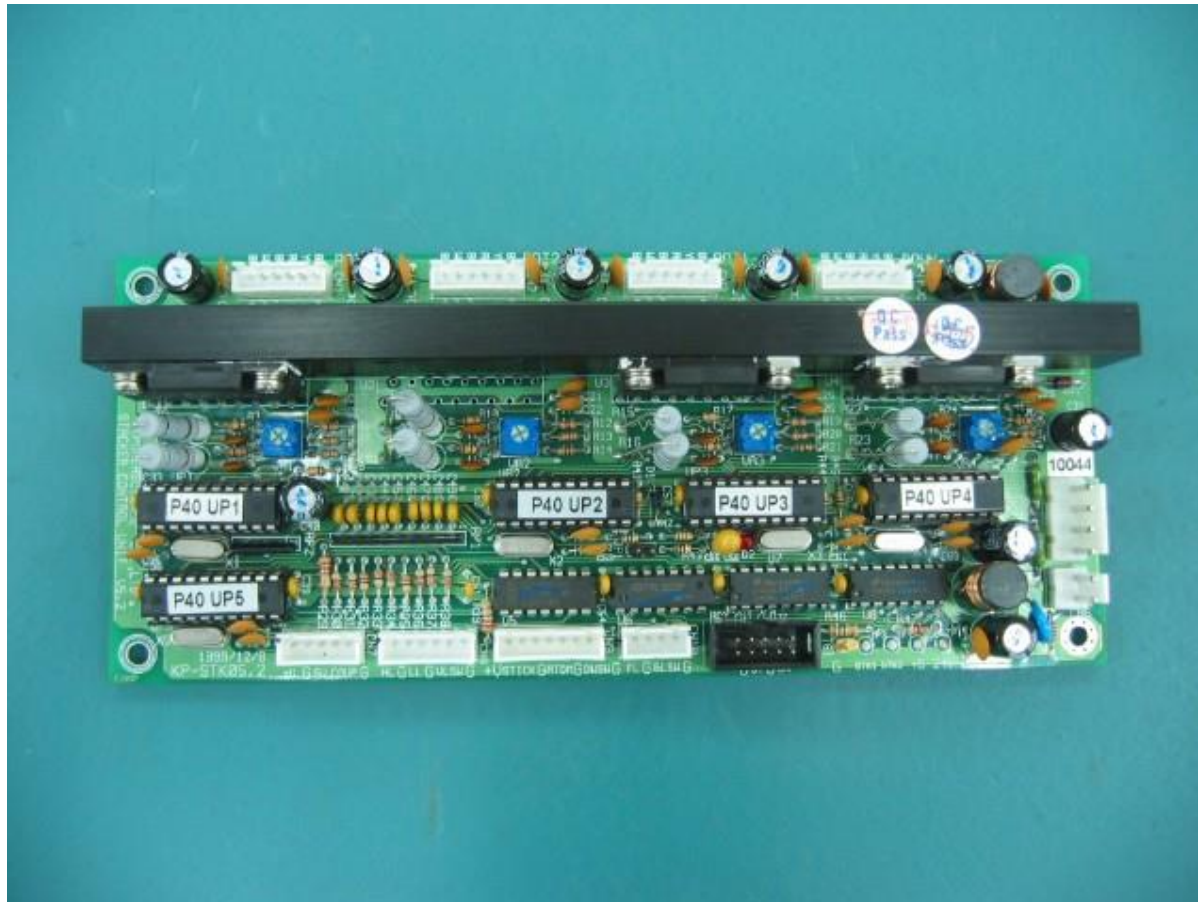

DC STACKER CONTROL BOARD V5.2 < WJ03-0357-010-01>

Fig. 3-12

3. STACKER SPARE PARTS



BEARING (MF 117ZZS) < WJ02-2020-001-01>

Fig. 3-13

Note : Bearing (MF 117ZZS) is used as Roller Unit


4. TOOLS



DRUM SETTING ROD < WJ02-3469-000-01>

Fig. 4-1

 4. TOOLS

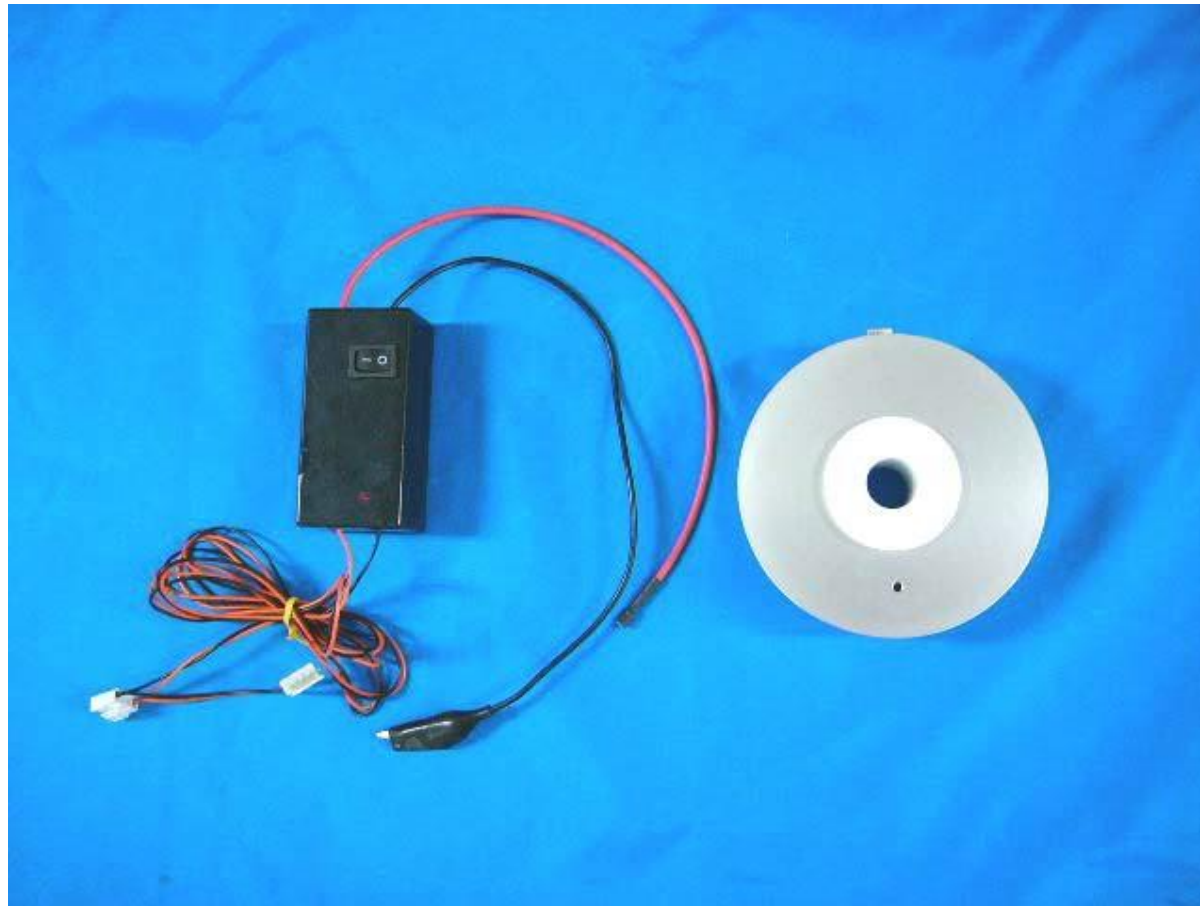


DUMMY DRUM SET < WJ05-5200-001-01>

Fig. 4-2

Note : DUMMY DRUM SET is for DSPS Sensor Adjustment

 4. TOOLS

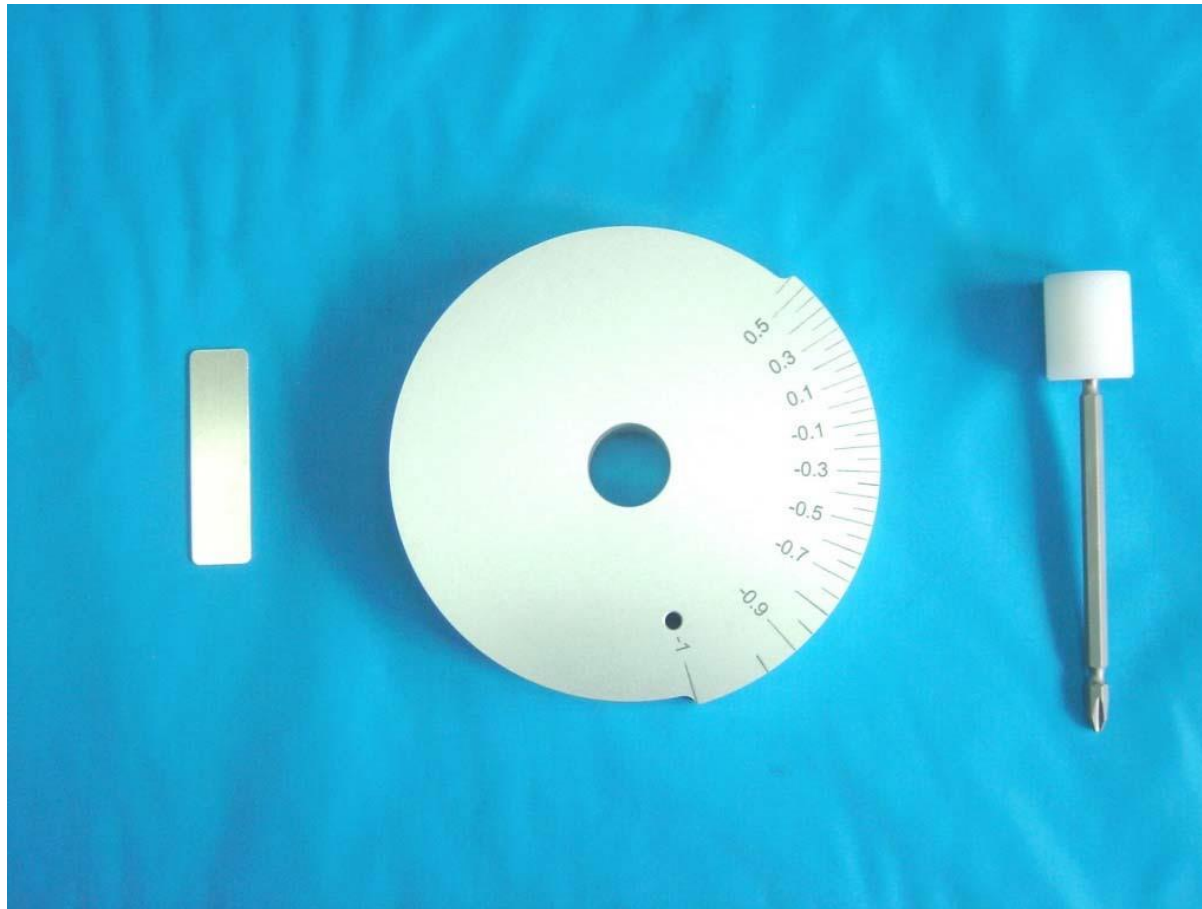

TRANSFER GAP GAUGE < WJ05-5200-002-01>

Fig. 4-3

4. TOOLS




SCRAPER < WJ05-5204-001-01>

Fig. 4-4

Note : SCRAPER is for Fuser Cover Glass

 4. TOOLS

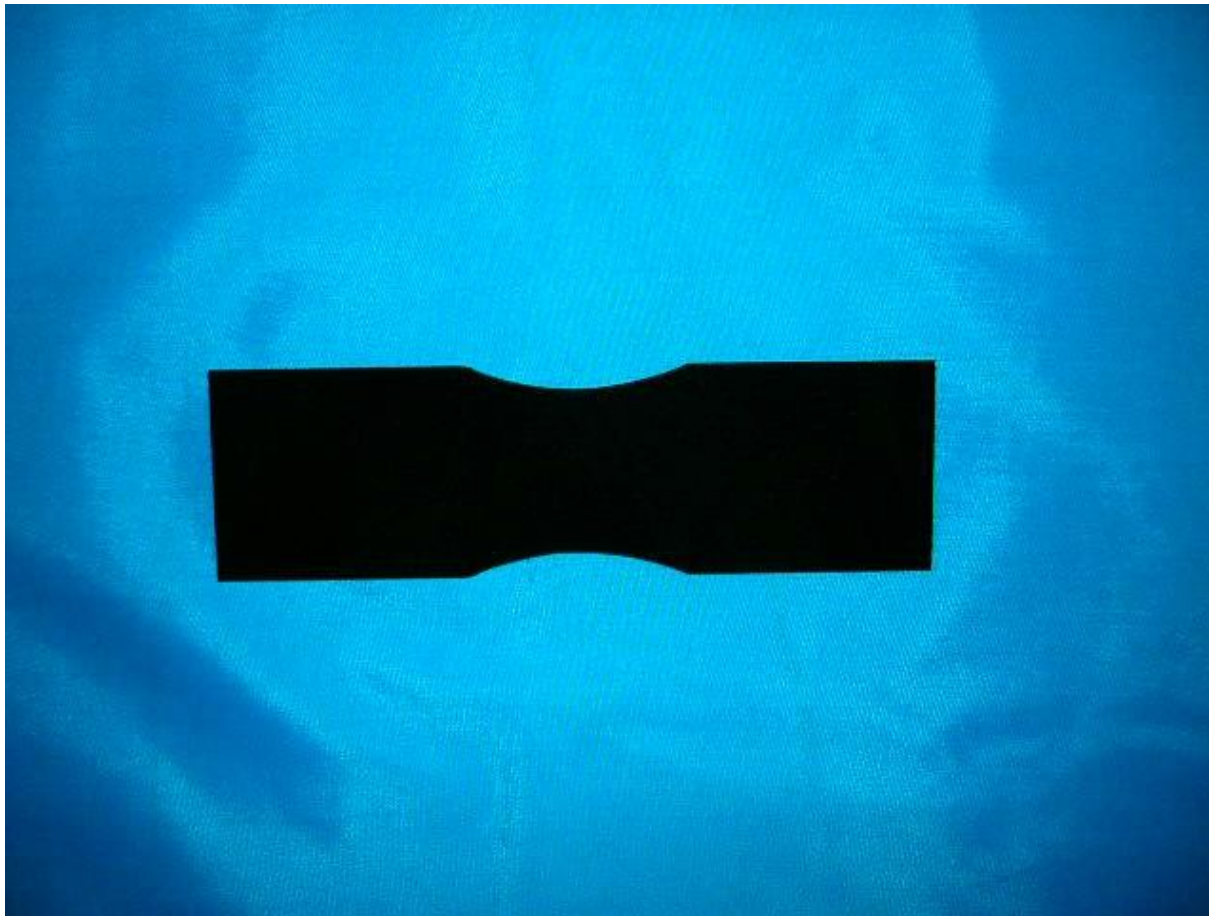

PLASTIC SCRAPER < WJ05-5204-002-01>

Fig. 4-5

Note : PLASTIC SCRAPER is for Transport Table Fused Toner

4. TOOLS



ADJUSTMENT TOOL (FOR PAPER EMPTY SENSOR) < WJ05-5301-001-01>

Fig. 4-6

4. TOOLS



ADJUSTMENT TOOL (FOR 1/6" PAPER IN ENCODER) < WJ05-5301-000-01>

Fig. 4-7

4. TOOLS



CLEAN TOOLS < WJ03-0439-000-01>

Fig. 4-8